

InfraRay™ Modulating Controller - Burners Zones 1 & 2 HOA

- Use this screen to activate CRV burners on start up to define the minimum and maximum vacuum pressure (minimum and maximum frequency for VFD) on manual mode.
- Only Roberts Gordon's authorized representatives have access to the username and password.
- **NOTE:** Remember, to activate the CRV burners on manual mode, you need to run the vacuum pump prior to using this option.
- Failing to follow this roll can cause life threaten and property damages.

