

InfraRay™ Modulating Controller – System View

- On system startup, the user must set the number of the satellite controllers in the No. of the Satellites field.
- If three satellites are on a system, input the number 3 and the field will say 4 for 4 panels.
- Panel 1 represents the master controller and panels 2 through 4 represent the satellite controllers.
- To change the controller's name, select Change Button Name.
- The name can also be changed from the MENU PANEL NAME CHANGE.

