


ROBERTS GORDON® Heating Controller - Configuration

Users set schedules in the Configuration-Zone.

All schedules should be created before adjusting settings in the Configuration-Zones screen.

Adjust settings according to the recommended settings on the next page.

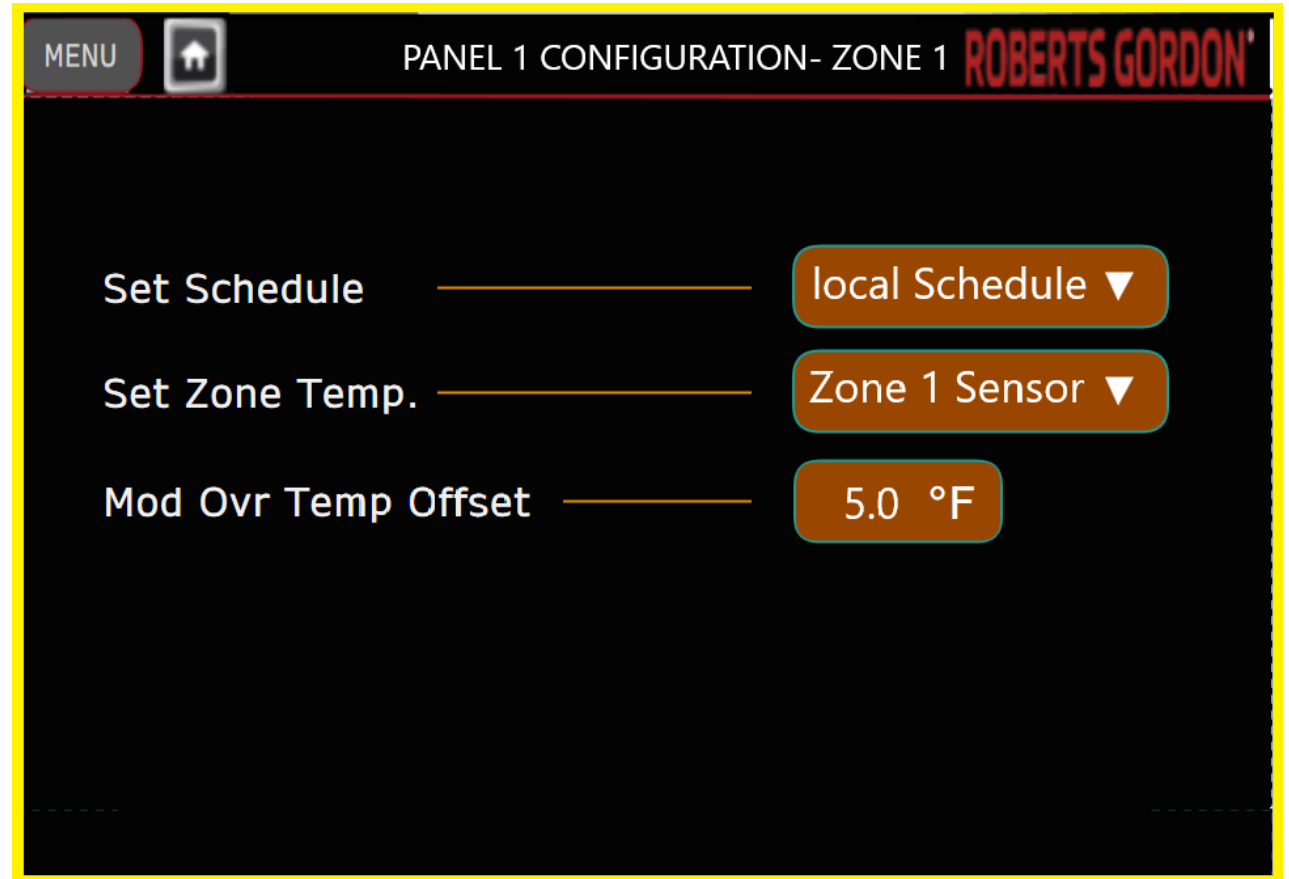

Recommended settings:

Set Schedule: Local Schedule allows users to read created schedules. The default schedule is Monday-Friday, 7 am to 5 pm. Users can change zone schedules.

Set Zone Temp.: Local Zone Sensor allows users to read space temperature through the zone sensor or to assign the other zone sensor to this zone. For example, if a zone sensor is broken, one sensor could be used for both zones.

Mod Over Temp Offset: 5.0 °F (if temperature within the zone falls many degrees below the setpoint, a 100% heat request will be activated).

