

GORDON-RAY

VENTED INFRARED RADIANT TUBE GAS HEATER

SPECIFICATIONS INSTALLATION, OPERATION, SERVICE & SPARE PARTS

RTH-R8 and RTH-R10

ENGINEERING FILE
COPY



Roberts  Gordon

A LEADER IN HEATING EQUIPMENT FOR OVER 50 YEARS

©ROBERTS-GORDON, INC.
Subsidiary of A.J. Industries Inc.

C
1
1

C

1
1
C

GORDON-RAY SPECIFICATIONS INSTALLATION, OPERATION, SERVICE & SPARE PARTS

TABLE OF CONTENTS

	PAGE		PAGE
Introduction			
Unpacking the Heater	1	Wiring Diagram	11
General Information	1	Optional Extension	12
General Specifications			
Model RTH-R8	1	2 Ft. Wide Decorative Grille	13
Model RTH-R8 Dimensions	2	Side Extension Reflectors	14-15
Model RTH-R10	1	1 Ft. Wide Decorative Grille	16-17
Model RTH-R10 Dimensions	3	Optional Heater Assemblies RTH-R8	18
Clearance to Combustibles	4	Optional Heater Assemblies RTH-R10	18
Installation			
Hanging the Heater	4	Optional Heater Assembly Details	19
Venting	5	Service Instructions	
In Public Garages	5	Sequence of Operation	20
In Aircraft Hangars	5	Service Procedures	
Field Assembly of RTH-R10 Heater	6	No Power to Heater	20
Venting Options	7	No Spark	20
Outside Combustion Air Supply (optional)	8	No Gas Present	21
Gas Piping	9	Fenwal Control	21
Field Wiring	10	Maintenance	22
		Replacement Parts	23-24
		Accessories	24

INSTALLER — Please take time to read and understand these instructions prior to any installation.

OWNER — Keep this manual in a safe place to provide your serviceman with helpful information if the need arises.

©1987 Roberts-Gordon, Inc.

All rights reserved. No part of this work covered by the copyrights hereon in may be reproduced or copied in any form or by any means — graphic, electronic, or mechanical, including photocopying, recording, taping, or information storage and retrieval systems — without written permission of Roberts-Gordon, Inc.

100
100
100

100

100
100
100

INTRODUCTION

UNPACKING THE HEATER

Remove the heater carefully from the shipping carton so as not to damage any components. The unit is inspected and tested at the factory before shipment and is delivered to the carrier in good condition. Check the heater for possible damage in shipment. In case of damage, the carrier should be contacted immediately.

GENERAL INFORMATION

It is important that these instructions and all applicable specifications be read in their entirety before proceeding.

This heater is intended for heating non-residential indoor spaces. Installation of this heater must comply with local building codes or in the absence of local codes, with the National Fuel Gas Code, ANSI Z223.1-1984 (same as Bulletin No. 54). Units must be electrically grounded in accordance with the National Electrical Code, ANSI/NFPA 70-1987. Installation in (1) aircraft hangars must be in accordance with the Standard for Aircraft Hangars, ANSI/NFPA 409-1985 and (2) garages in accordance with the Standard for Parking Structures, NFPA 584-1985 or the Standard for Repair Garages, NFPA 88B-1985.

For locations where there is the possibility of exposure to combustible airborne materials or vapors, consult the manufacturer's literature for additional information and instructions. The manufacturer's literature is available from the Field Service Department of the Industrial Line.

For information on applicable codes, regulations, and standards, consult the applicable code book or contact the local authority having jurisdiction. For information on applicable codes, regulations, and standards, consult the applicable code book or contact the local authority having jurisdiction.

GENERAL SPECIFICATIONS

TO THE INSTALLER

This manual provides installation, operation and service information for both the Model RTH-R8 and RTH-R10 units. Sections relating only to the specific units are identified by a solid border for Model RTH-R8 and a broken line border for Model RTH-R10.

MODEL RTH-R8			MODEL RTH-R10		
RATING:			RATING:		
(Natural & L.P. Gas) — 75,000 BTU/Hr. Input			(Natural & L.P. Gas) — 100,000 BTU/Hr. Input		
GAS PRESSURE AT MANIFOLD:			GAS PRESSURE AT MANIFOLD:		
Natural Gas	3.5" W.C.	Natural Gas	3.5" W.C.
L.P. Gas	10.5" W.C.	L.P. Gas	10.5" W.C.
Gas Connection Size	3/8" NPT	Gas Connection Size	3/8" NPT
GAS INLET PRESSURE			GAS INLET PRESSURE		
Gas	*Minimum	Maximum	Gas	*Minimum	Maximum
Natural	4.5" W.C.	14.0" W.C.	Natural	4.5" W.C.	14.0" W.C.
L.P.	11.0" W.C.	14.0" W.C.	L.P.	11.0" W.C.	14.0" W.C.
ELECTRICAL RATING:			ELECTRICAL RATING:		
RTH-R8 — 120V - 60Hz - 2.6 AMP			RTH-R10 — 120V - 60Hz - 2.6 AMP		
Flue Connection Size 4" O.D.			Flue Connection Size 4" O.D.		
Weight of Heater 150 lbs.			Weight of Heater 200 lbs.		

*Minimum permissible gas supply pressure for purpose of input adjustment.


CLEARANCES TO COMBUSTIBLES (From Heater Surfaces)

See Figure 3 on Page 4 of these Installation Instructions.


In all situations, clearances to combustibles must be maintained. (WARNING: Minimum clearance from heater must be maintained from vehicles parked below heater.)

STANDARD EQUIPMENT INCLUDES: Complete heater assembled, consisting of: cast iron burner, heat exchanger, fully automatic DSI ignition, motor with thermal overload switch, balanced air rotor, combustion air proving safety pressure switches, aluminum reflector, manual gas shut-off valve, and stainless steel flue baffle.

OPTIONAL EQUIPMENT: Thermostat, decorative aluminum grille, reflector side extension, thru the wall vent terminal, outside air adaptor kit, 8-foot radiant tube extension and reflector.

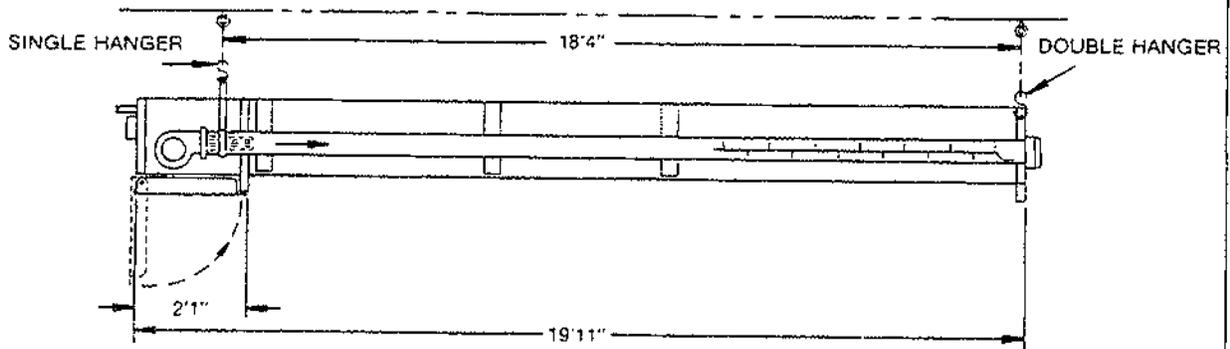

MODEL RTH-R8 DIMENSIONS
Figure 1

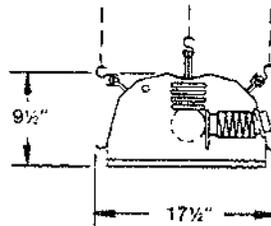


CLEARANCES TO COMBUSTIBLES (From Heater Surfaces)

See Figure 3 on Page 4 of these Installation Instructions.


In all situations, clearances to combustibles must be maintained. (WARNING: Minimum clearance from heater must be maintained from vehicles parked below heater.)

STANDARD EQUIPMENT INCLUDES: Cast iron burner, heat exchanger (packaged in 2 sections), fully automatic DSI ignition, motor with thermal overload switch, balanced air rotor, combustion air proving safety pressure switches, aluminum reflector, manual gas shut-off valve, and stainless steel flue baffle.


OPTIONAL EQUIPMENT: Thermostat, decorative aluminum grille, reflector side extension, thru the wall vent terminal, outside air adaptor kit, 8-foot radiant tube extension and reflector.

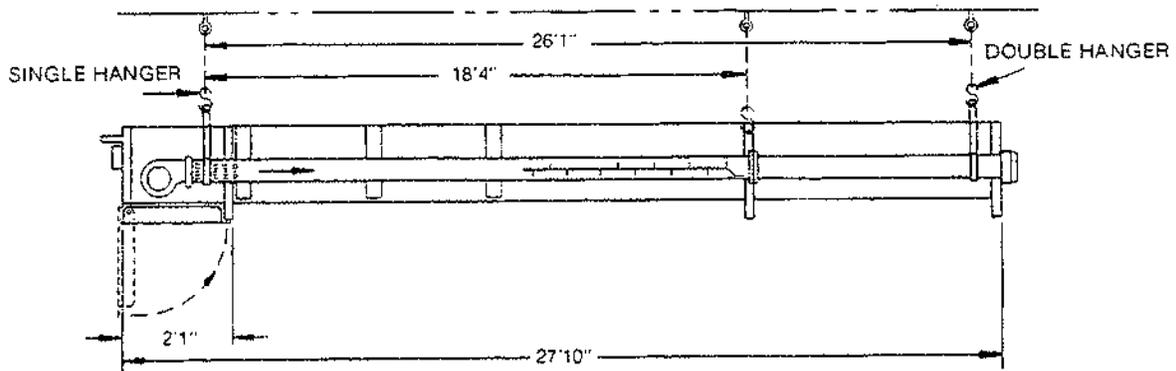


MODEL RTH-R10 DIMENSIONS
Figure 2

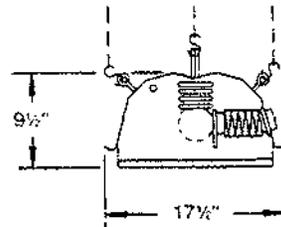

MODEL RTH-R8

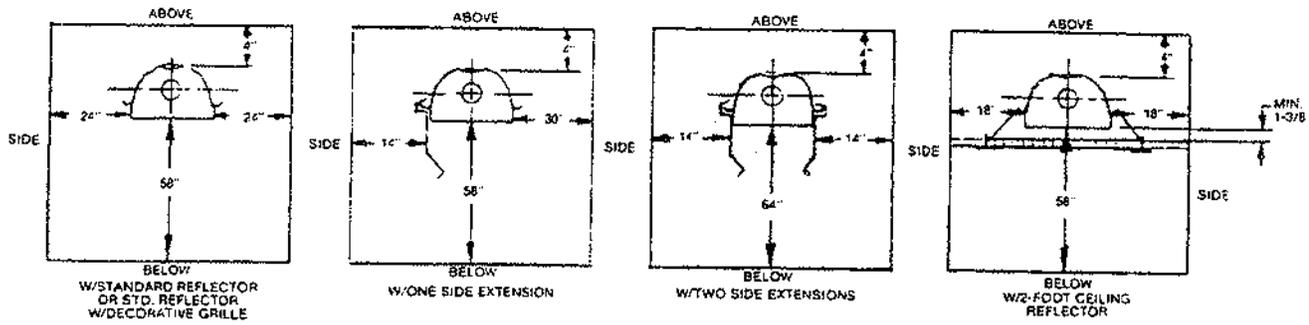

MODEL RTH-R10

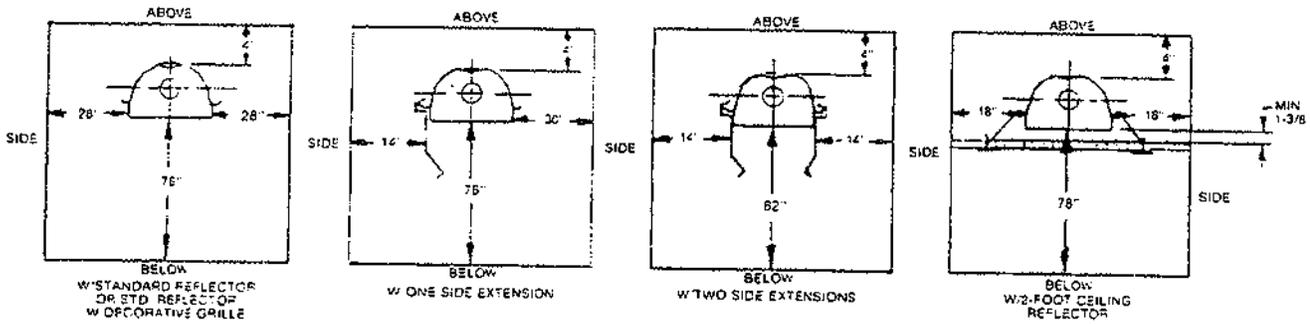

WARNING: Minimum clearance from heater must be maintained from vehicles parked below heater.

NOTE: In all situations, clearances to combustibles must be maintained. Signs should be posted in storage areas to specify maximum stacking height to maintain required clearance to combustibles.

CLEARANCE TO COMBUSTIBLES WITH STANDARD REFLECTOR AND OPTIONAL EQUIPMENT
Figure 3

INSTALLATION

IMPORTANT: The type of gas appearing on the heater nameplate must be the type of gas used. Read all accompanying literature carefully before proceeding with installation. Allow for adequate clearances around air openings in heater, clearances to combustible materials, provide for accessibility for service, combustion and ventilating air supply as specified in ANSI Z223.1 National Fuel Gas Code.

SPECIAL CONSIDERATIONS

HANGING THE HEATER

Suspension straps and "S" hooks provided with the heater should be used as the only suspension points. Chain should be used to support the unit between the ceiling and suspension straps provided.

Chain should have a load rating of at least 150 lbs. at each suspension point. For instructions on mounting height and locations of heaters, refer to installation plans or supplier of equipment.

VENTING

The venting must be installed in accordance with specification ANSI Z223.1 (NFPA No. 54). Partial information relating to this specification is provided in this section with regard to size and configurations for venting arrangements. (See Figures 5a, 5b and 5c.) For complete information consult ANSI Z223.1 and local codes.

1. Be sure that method selected for venting heater complies with all codes as required for each particular location.
2. Exhaust end of heater will accept a four-inch flue pipe.
3. Heater may be vented to the outdoors either vertically or horizontally.
4. If heater is to be vented horizontally:
 - a.) Vent must exit building not less than seven feet above grade when located adjacent to public walkways.
 - b.) Vent must terminate at least three feet above any forced air inlet located within 10 feet.
 - c.) Vent shall terminate at least four feet below, four feet horizontally from or one foot above any door, window or gravity air inlet into building.
 - d.) Vent terminal shall be located at least 12 inches from any opening through which vent gases could enter a building.
5. Vent terminal opening must be beyond any combustible overhang.
6. Any portion of flue pipe passing through a combustible wall must be dual insulated or an approved thimble must be used (refer to ANSI Z223.1).
7. Maximum flue length may be a total of 50 feet (including optional 8-foot radiant tube extension if used). Do not use more than two 90° elbows.
8. If condensation in the flue is a problem, the flue length should be shortened or insulated.

IN PUBLIC GARAGES

In accordance with the standard for parking structures NFPA 88A-1985 or the standard for repair garages NFPA 88B-1985:


1. Heaters shall be installed in accordance with their listings and not less than eight feet above the floor. Minimum clearances to combustibles must be maintained from vehicles parked below the heater.
2. When installed over hoists, clearance to combustible material must be maintained from top of vehicle on hoist or in elevated position.
3. Clearance between the heater and its vent and adjacent combustible material (which is part of the building or its contents) shall be maintained to conform with National Fuel Gas Code (NFPA No. 54 ANSI Z223.1-1984).

IMPORTANT: Heaters should be placed so they will be readily accessible for maintenance.

IN AIRCRAFT HANGARS


Heaters must be installed in accordance with specification, ANSI/NFPA 409-1985 and with special consideration for the following:

1. Heaters in aircraft storage or service areas shall be installed at a height of at least 10 feet above the upper surface of wings or engine enclosures of the highest aircraft which may be housed in the hangar. (This should be measured from the bottom of the heater to the wing or engine enclosure, whichever is highest from the floor.)
2. In other sections of aircraft hangars, such as shops or offices communicating with airplane storage or servicing area, heaters shall be installed in accordance with their listings and not less than eight feet above the floor.
3. Heaters installed in aircraft hangars shall be so located as not to be subject to damage by aircraft, cranes, moveable scaffolding or other objects. Heaters shall be placed so they will be readily accessible for maintenance purposes.

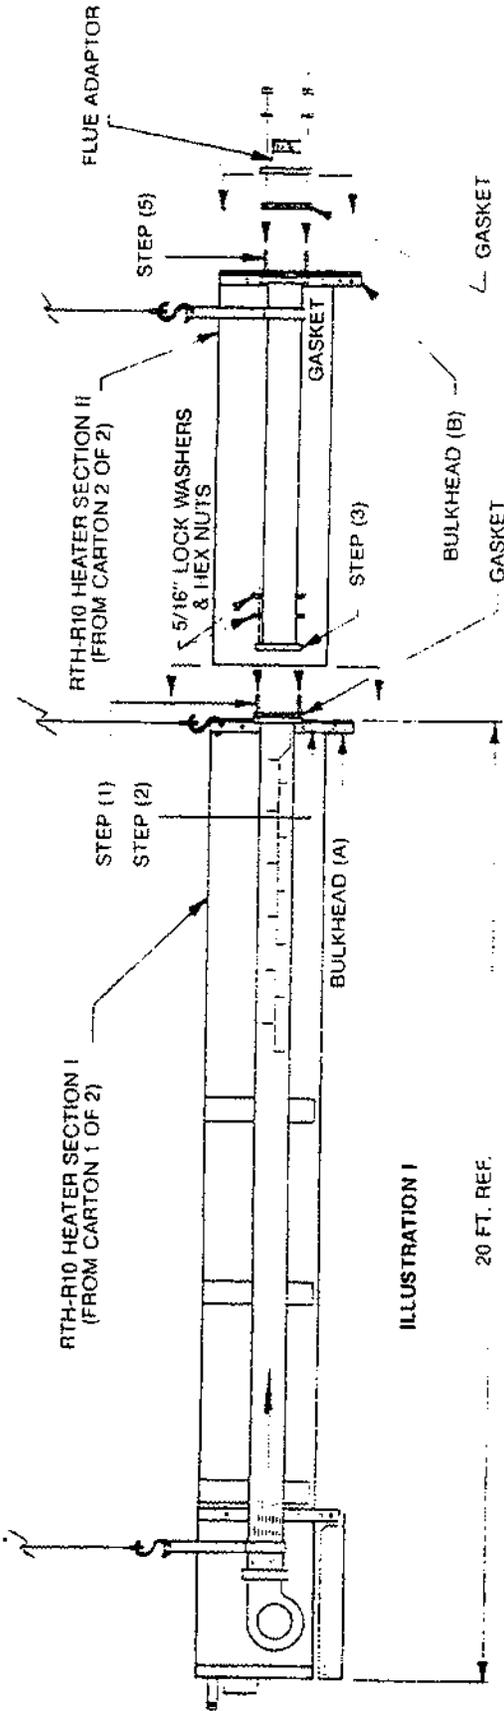

To install RTH-R10 Heater Section II to Section I (Illustration 1):


- Step (1) — Remove hex nuts and lock washers from studs at discharge end of Section I (leave gasket on studs).
- Step (2) — Remove four #12 sheet metal screws holding reflector to Bulkhead (A) and loosen two hanger eye bolts.
- Step (3) — Attach Section II to Section I (using lock washers and hex nuts previously removed) as shown (Illustration 1 or 2).
- Step (4) — Overlap Section II reflector over Section I reflector at Bulkhead (A) lining up holes in reflectors and bulkhead and assemble with sheet metal screws previously removed and tighten eye bolts.
- Step (5) — Slip gasket and flue adaptor over (4) studs at Bulkhead (B) (Illustration 1) lining up locating pin in flue adaptor flange with clearance hole in Bulkhead (B) and attach using hex nuts and lock washers provided.

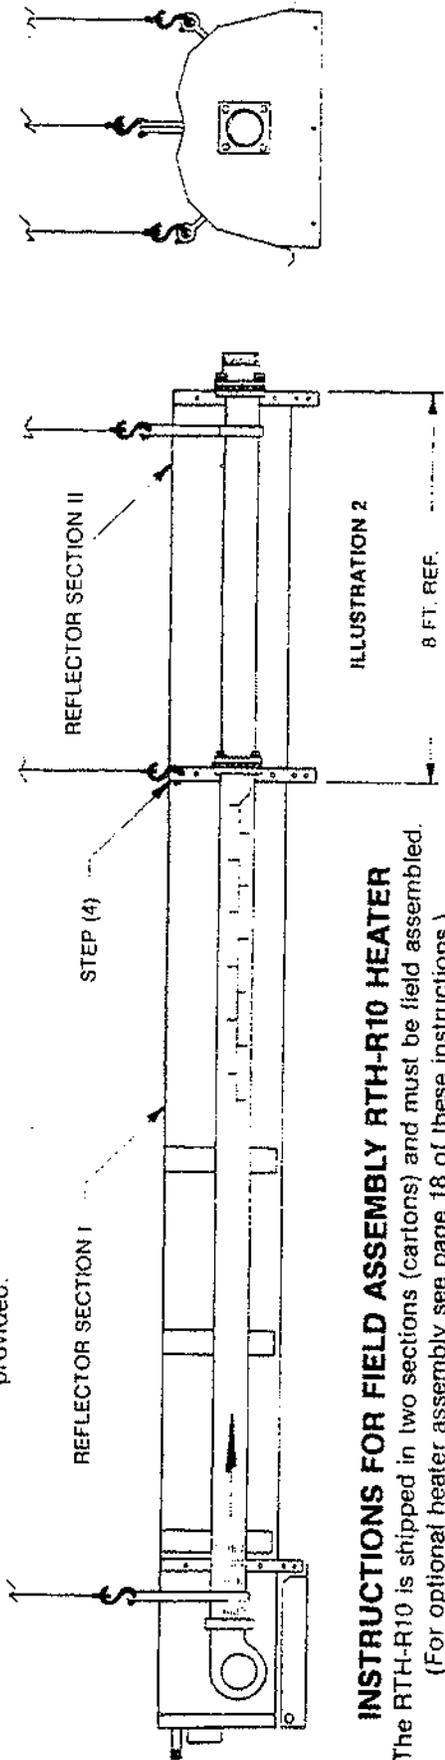


INSTRUCTIONS FOR FIELD ASSEMBLY RTH-R10 HEATER

The RTH-R10 is shipped in two sections (cartons) and must be field assembled.
 (For optional heater assembly see page 18 of these instructions.)

Figure 4

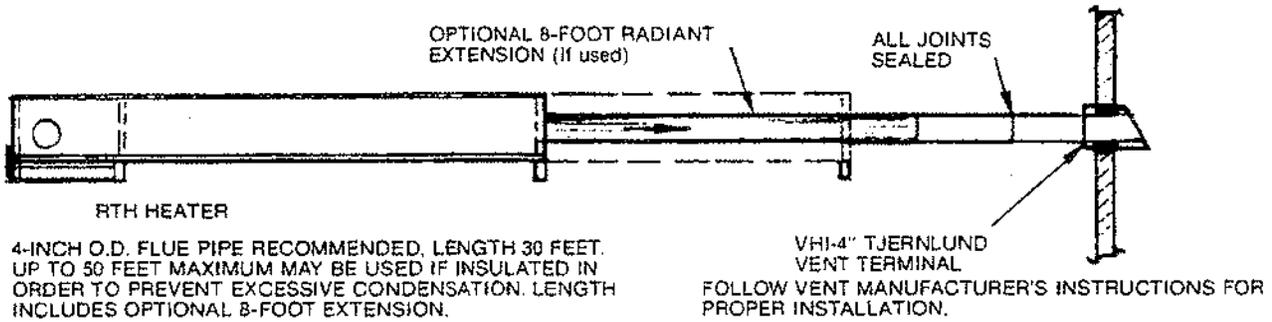

HORIZONTAL VENTING
Figure 5a

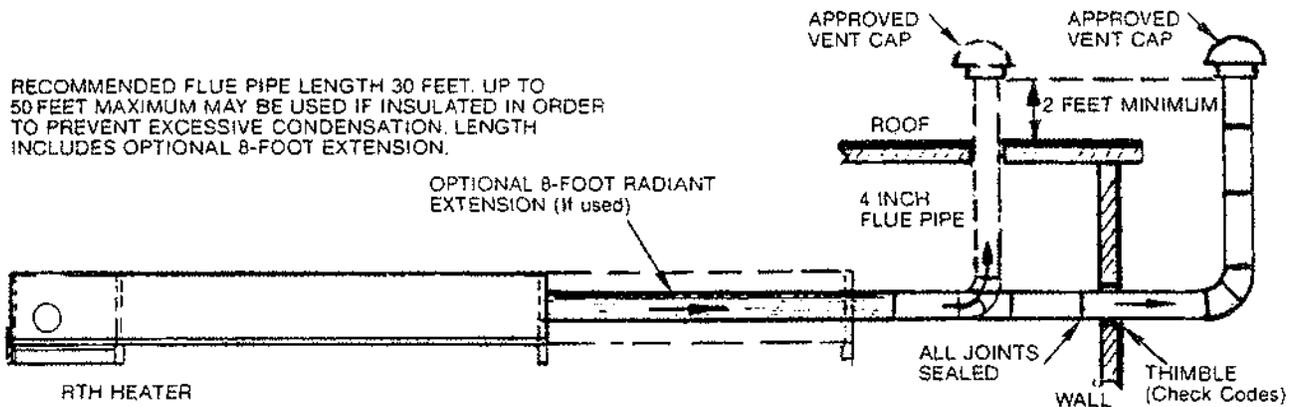


VERTICAL VENTING
Figure 5b

HORIZONTAL RUN TO VENT MUST NEVER EXCEED 75% OF THE VERTICAL HEIGHT OF THE VENT. REFER TO ANSI Z223.1; 1984, NFPA-54 FOR PROPER VENT SIZES AND INSTALLATION.

DOUBLE WALL (Check Codes)
(Open area of vent must equal the sum of the open area of individual flue vents connected to it.)

Use General Electric RTV 106 Red High Temperature Silicone Adhesive Sealant or equivalent.

AT LEAST 1/4 INCH PER FOOT RISE OR PITCH MUST BE MAINTAINED ON HORIZONTAL RUNS FROM HEATER TO VENT.

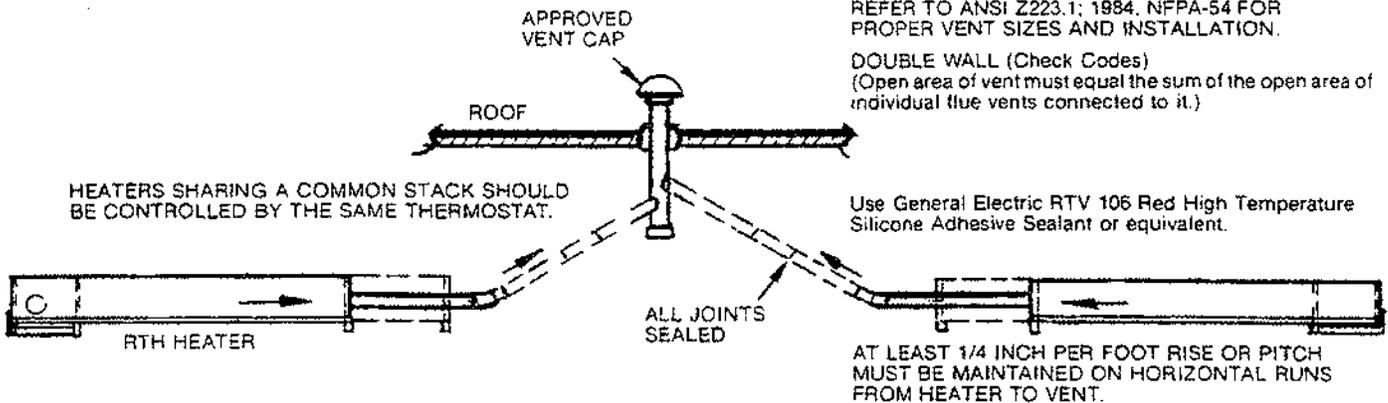


COMMON VENTING
Figure 5c

VENTING OPTIONS
MODEL RTH-R8 and MODEL RTH-R10
Figure 5


OUTSIDE COMBUSTION AIR SUPPLY (OPTIONAL)

1. If indoor combustion air is supplied to the heater in a tightly closed room, one square inch of free area opening should be provided for each 1,000 BTU/Hr. of heater input, but not less than 100 square inches. One opening should be within 12 inches of the top and one within 12 inches of the bottom of the enclosure.
2. If the building has a slight negative pressure or contaminants in the air are present, then outside combustion air may be supplied to the heaters using the optional outside air adaptor kit.
3. A duct of four inches O.D. flue pipe may be attached to the heater outside air adaptor. The duct may be up to 50 feet in length maximum with no more than two 90° elbows in its total length.
4. Air supply duct may have to be insulated to prevent condensation on outer surface.
5. Air inlet vent cap should be securely fastened to outside wall by drilling four 1/4" diameter holes in outside flange; wood screws or bolts and expansion sleeves may be used as a fastening means.

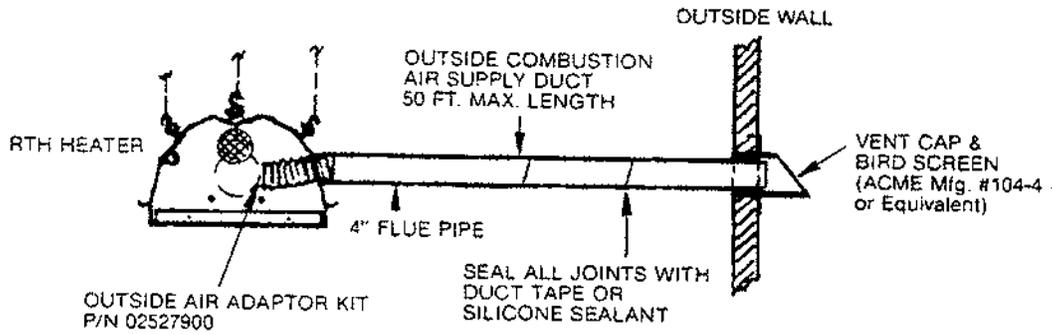

OUTSIDE COMBUSTION AIR INSTALLATION

Figure 6

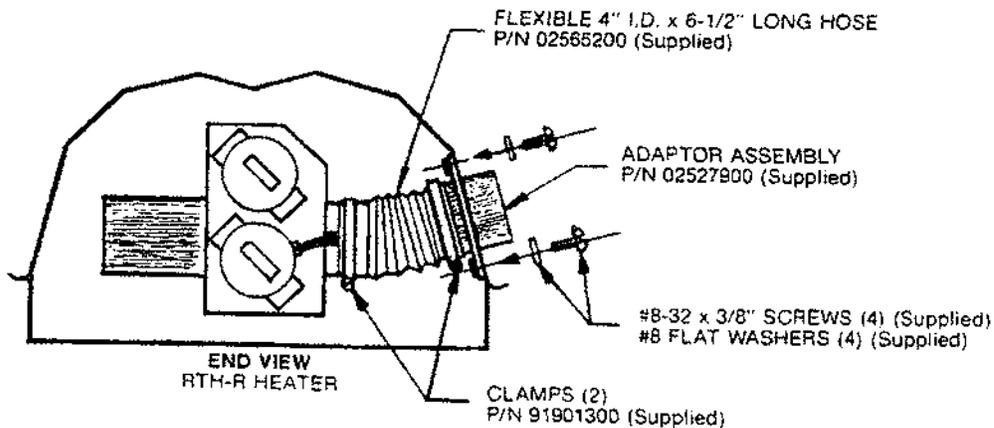

OUTSIDE AIR SUPPLY ADAPTOR PACKAGE

P/N 02527901

Figure 7

GAS PIPING

1. Check meter to be sure it is large enough to handle all the gas appliances on the line, including this heater. If necessary, request gas company to install a larger meter.
2. The gas line which feeds the heater(s) must be large enough to supply the required gas with a maximum pressure drop of 0.5 inches water column. If there is any question, check with the gas company. Use the following capacity table as a guide:


Pipe (Inches)	Length of Straight Pipe (Feet)						
	20	40	60	80	100	150	200
1/2	120	82	66	57	50	40	35
3/4	250	170	138	118	103	84	72
1	465	320	260	220	195	160	135

Pipe Capacity Cu. Ft. Hr.
Table 1

3. All pipe should be properly supported by using suitable pipe hanging materials.
4. Wrought iron or wrought steel pipe and malleable iron fittings are recommended. All pipe and fittings should be new and free from defects.
5. Ends of pipes and tubing should be carefully reamed to remove obstructions or burrs.
6. Use a special compound in making all pipe connections. Compound should be of a type that is suitable for L.P. Gas.
7. Install a drip leg ahead of the heater to prevent foreign matter and moisture from entering the heater controls.
8. A 1/8-inch N.P.T. plugged tapping must be installed immediately upstream of the gas supply connected to the heater, accessible for test gage connection.
9. All gas piping must conform with local building codes, or in the absence of local codes, with the National Fuel Gas Code ANSI Z223.1-1984, NFPA-54.
10. All gas piping should be checked for leaks before placing heating equipment into service. In checking for gas leaks use a soap and water solution. NEVER use an open flame.

CAUTION: For high pressure testing of gas piping, disconnect completely all burner units and shut-off cocks supplied with same; then install pipe cap on system and conduct test. Failure to follow this procedure will exceed pressure rating of both burner gas controls and shut-off cock and will require complete replacement of these parts.

NOTE 1
HIGH PRESSURE STOP COCK AS SUPPLIED BY INSTALLER IF REQUIRED.

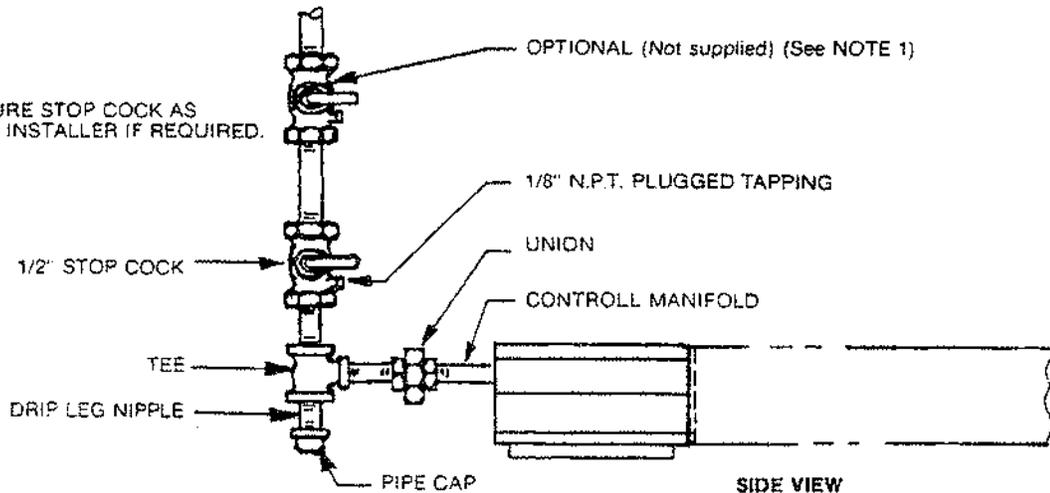

GAS PIPING DETAIL
Figure 8


FIELD WIRING

Heaters are normally controlled by thermostats (see Figure 9). Line voltage thermostats are wired directly; the recommended 24-volt thermostats use a relay per Figure 10. Heaters must be grounded in accordance with National Electrical Code ANSI/NFPA 70-1987.

Heaters can also be controlled with a manual line voltage switch or timer switch in place of the thermostat.


NOTES:

1. If any of the original wire as supplied with the appliance must be replaced, it must be replaced with wiring material having a temperature rating of at least 105°C.
2. For wiring line voltage thermostat White-Rodgers P/N 176-12 (RG 90410300) use terminals "B" and "R" and jumper terminal "W" to "R".

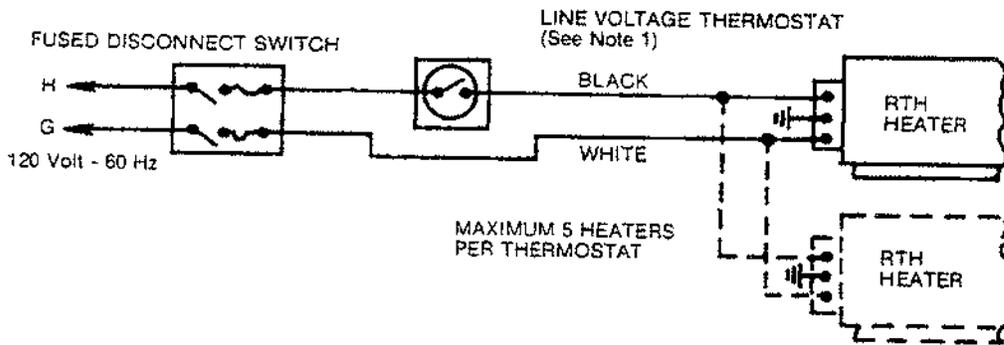


WIRING OF LINE VOLTAGE THERMOSTAT

Figure 9

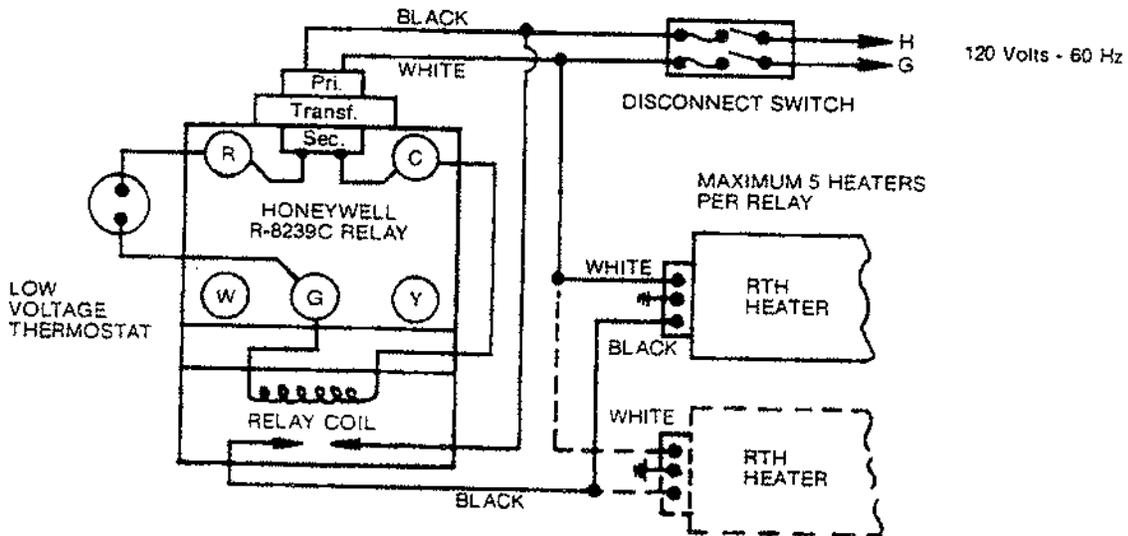

WIRING OF LOW VOLTAGE THERMOSTAT AND RELAY

Figure 10

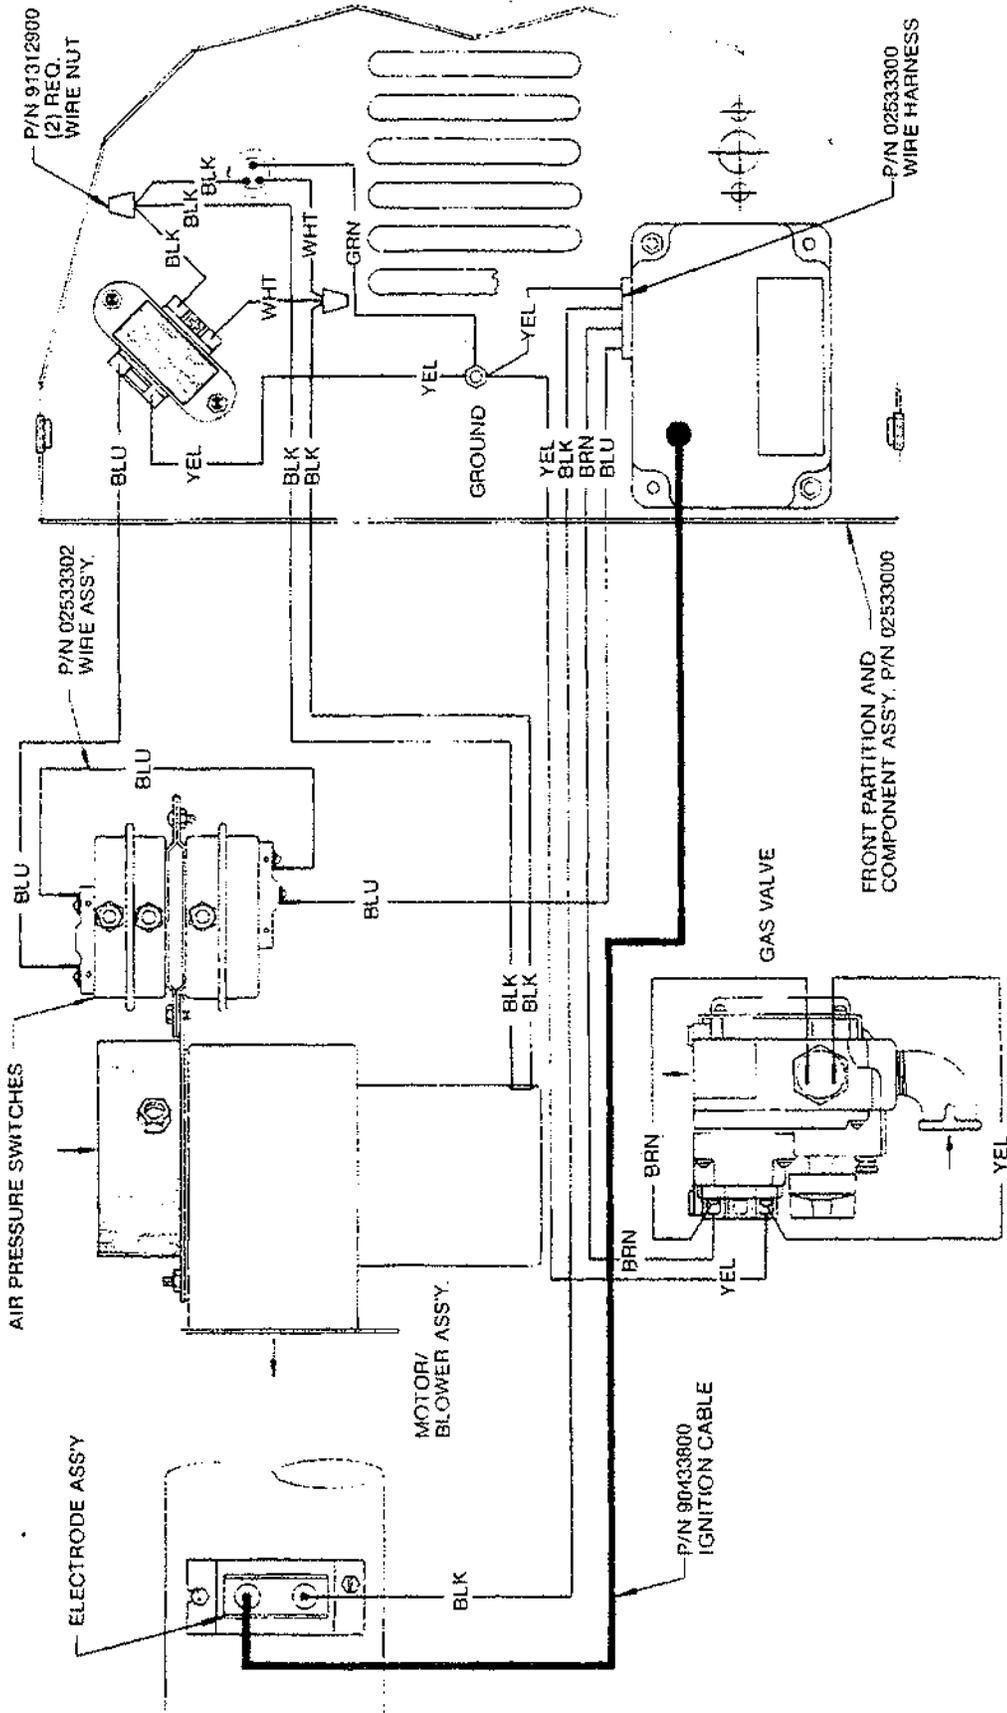

NOTES:

1. If any of the original wire as supplied with the appliance must be replaced, it must be replaced with wiring material having a temperature rating of at least 105°C.
2. Each burner must be electrically grounded in accordance with National Electrical Code ANSI/NFPA 70-1987.
3. For low voltage thermostat and/or parallel burner operation see Wiring Diagrams, Figures 9 or 10, Page 10.

WIRING DIAGRAM
Figure 11

INSTALLATION

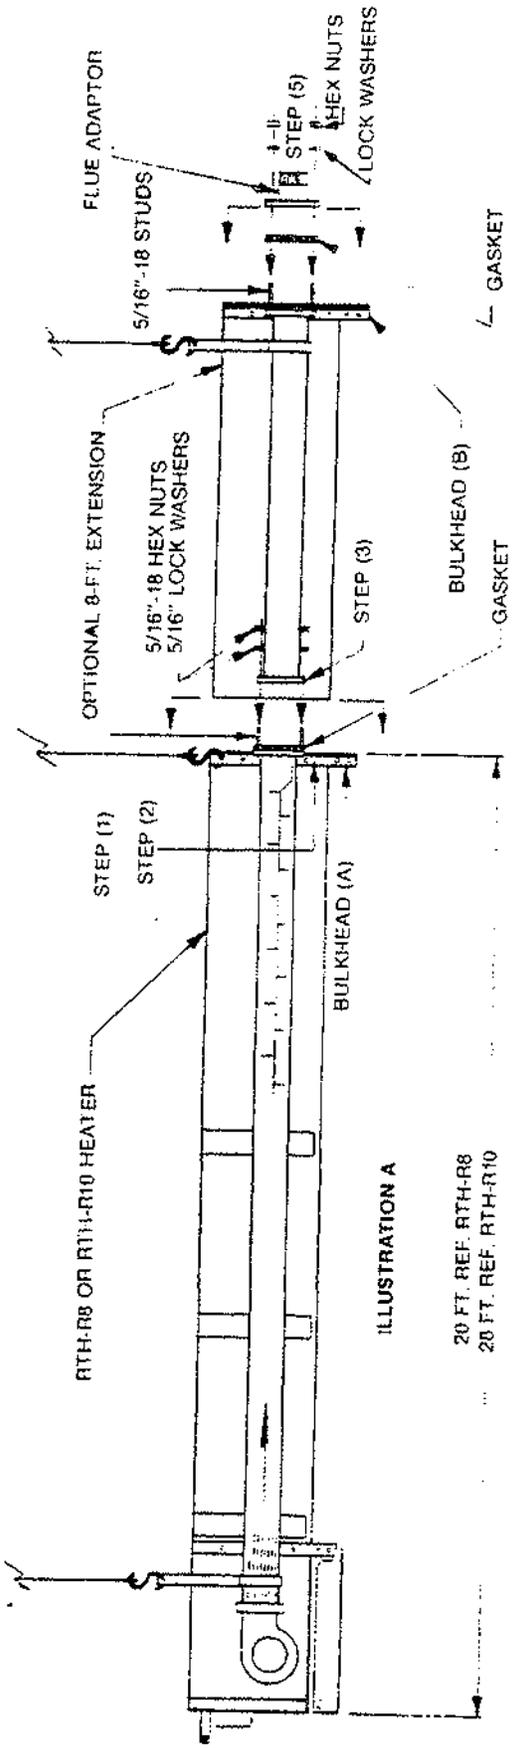


ILLUSTRATION A
 20 FT. REF. RTH-R8
 20 FT. REF. RTH-R10

- Step (1) — Remove four hex nuts and lock washers at Bulkhead (A) on flue end of heater and remove flue adaptor (if installed) leaving gasket in place.
- Step (2) — Remove four #12 sheet metal screws holding reflector in place at Bulkhead (A) and loosen two hanger eye bolts.
- Step (3) — Slip flange of 8-ft. extension onto the four studs at Bulkhead (A) and attach with four hex nuts and lock washers removed in Step (1) above.
- Step (4) — Overlap optional extension reflector over heater reflector at Bulkhead (A) (see Illustration B below). Line up the hole in reflectors and Bulkhead (A) and reassemble using sheet metal screws removed in Step (2) above and tighten eye bolts.
- Step (5) — Slip gasket and flue adaptor over four 5/16" - 18 studs at Bulkhead (B) locating pin on flue adaptor with hole in Bulkhead (B) and attach with hex nuts and lock washers provided.


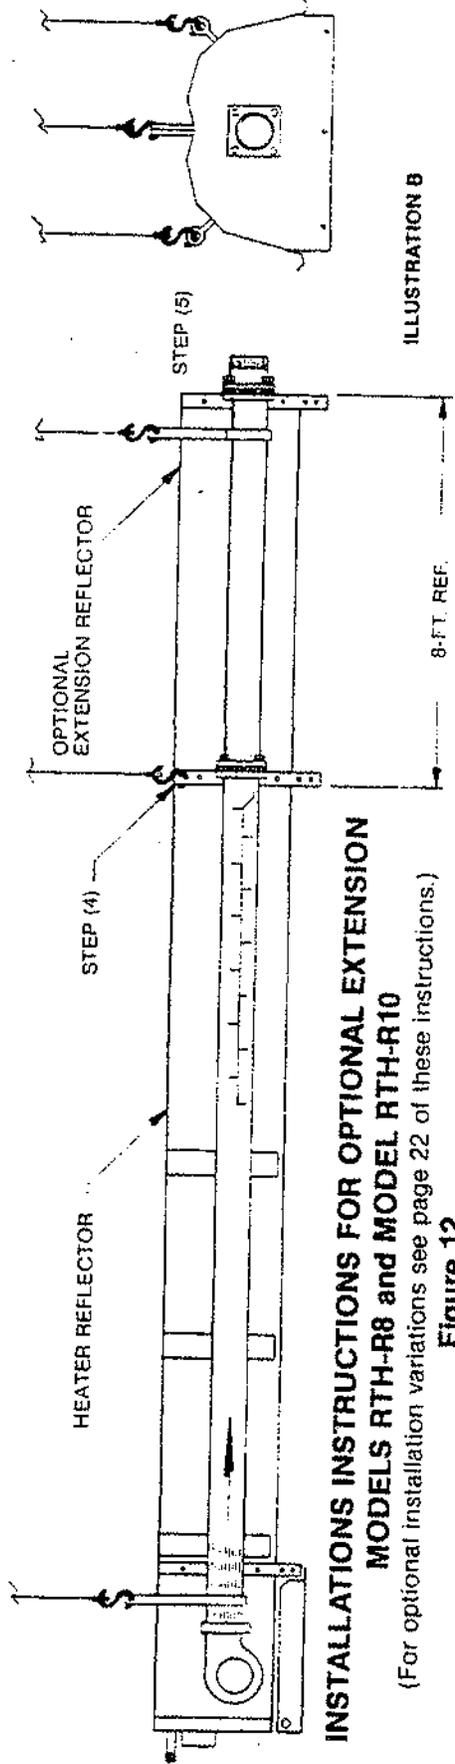


ILLUSTRATION B


**INSTALLATIONS INSTRUCTIONS FOR OPTIONAL EXTENSION
 MODELS RTH-R8 and MODEL RTH-R10**
 (For optional installation variations see page 22 of these instructions.)
Figure 12

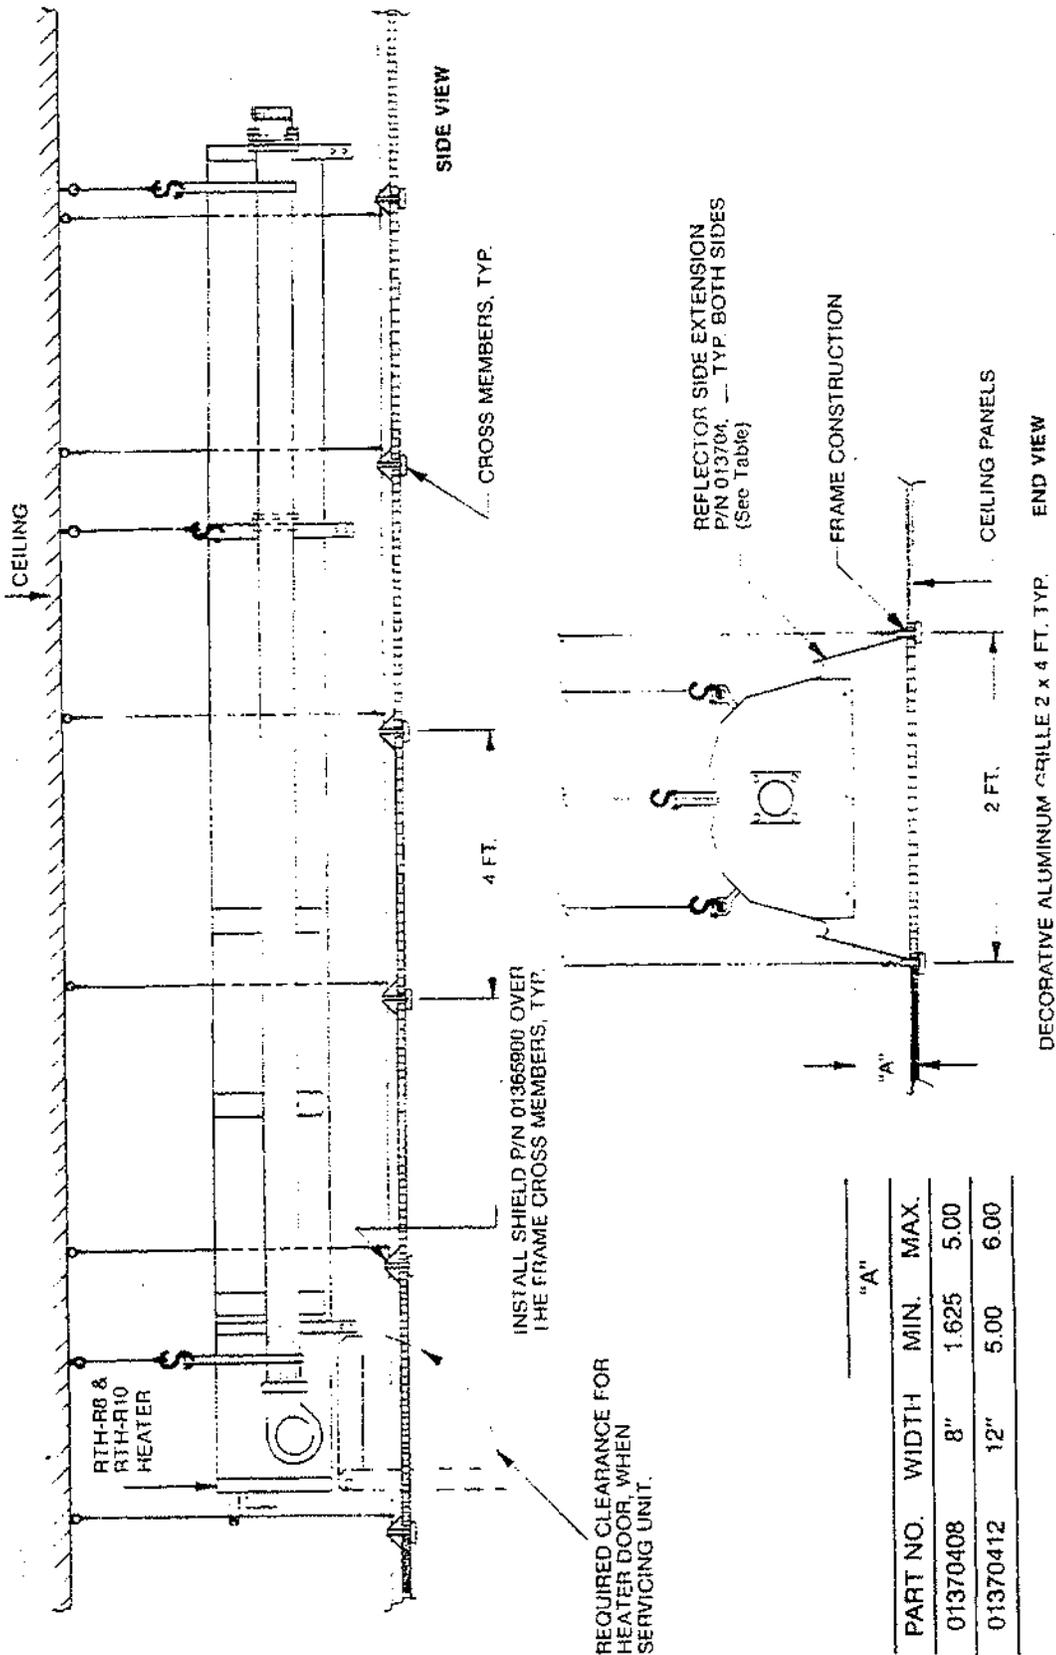

IMPORTANT: In all cases clearance to combustibles must be maintained. See clearance to combustibles charts (Figure 3) of these instructions.


INSTALLATION OF RTH-R8 AND RTH-R10 HEATER WITH 2-FT. WIDE DECORATIVE ALUMINUM GRILLE

Figure 13

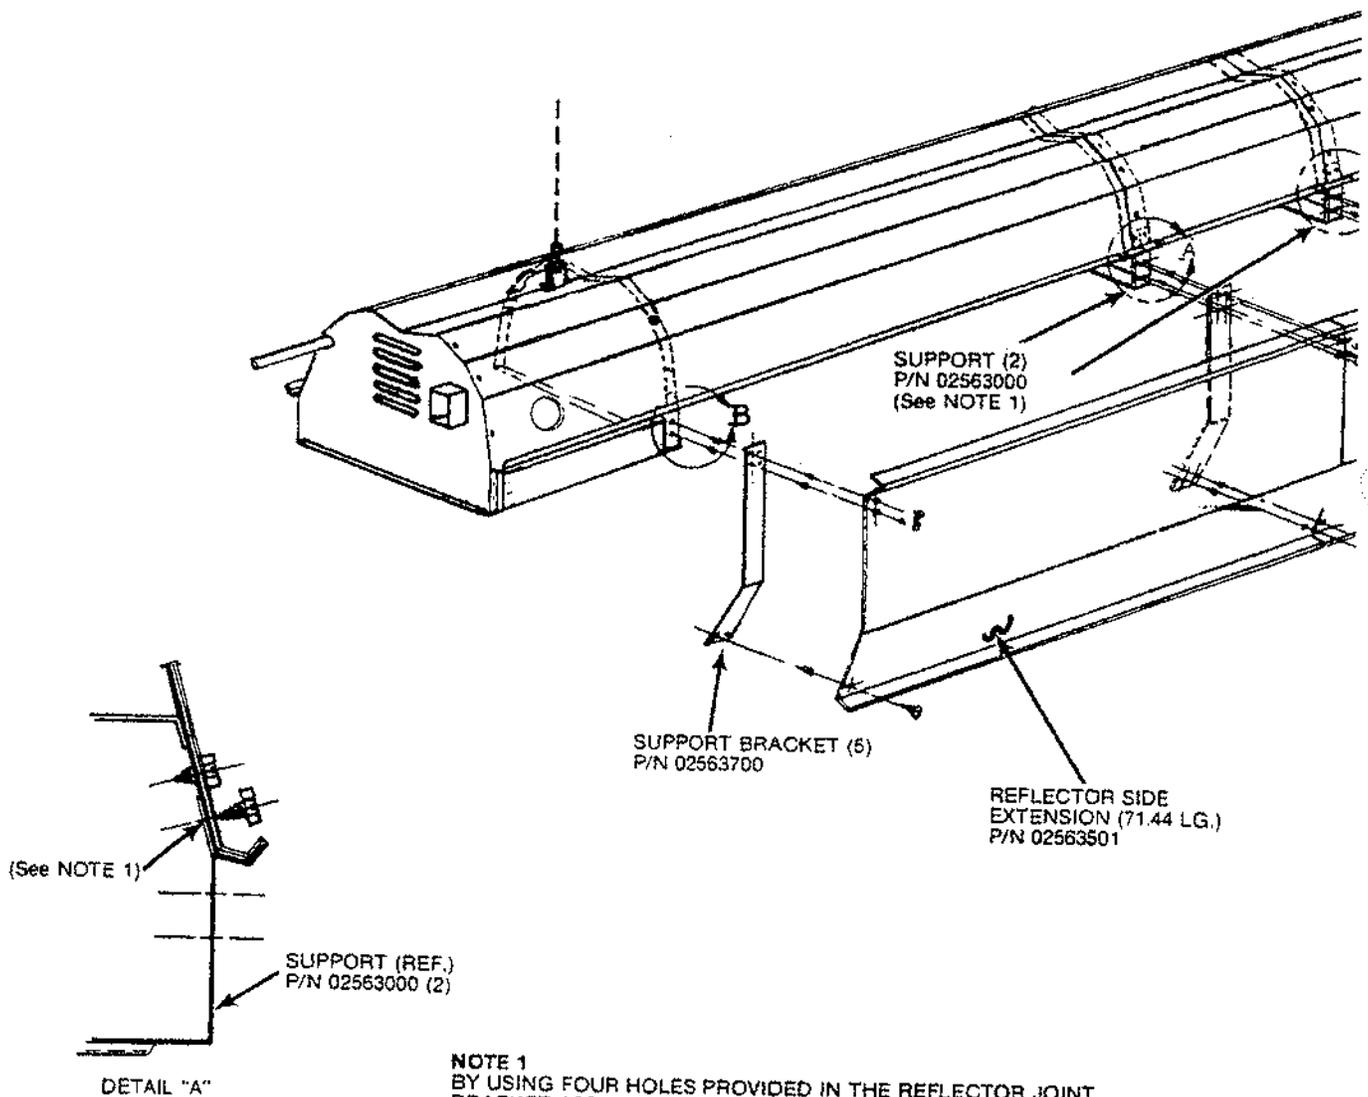


NOTE 1
BY USING FOUR HOLES PROVIDED IN THE REFLECTOR JOINT BRACKET ASSEMBLY (VISIBLE FROM INSIDE), DRILL 7/32" DIAM. HOLES THROUGH ASSEMBLED REFLECTORS, THEN INSTALL SUPPORT, P/N 02563000 BY USING #12 x 1/2" SHEET METAL SCREWS AS SHOWN IN DETAIL "A".

**INSTALLATION OF OPTIONAL REFLECTOR
SIDE EXTENSIONS
MODEL RTH-R8 AND MODEL RTH-R10
Figure 14**

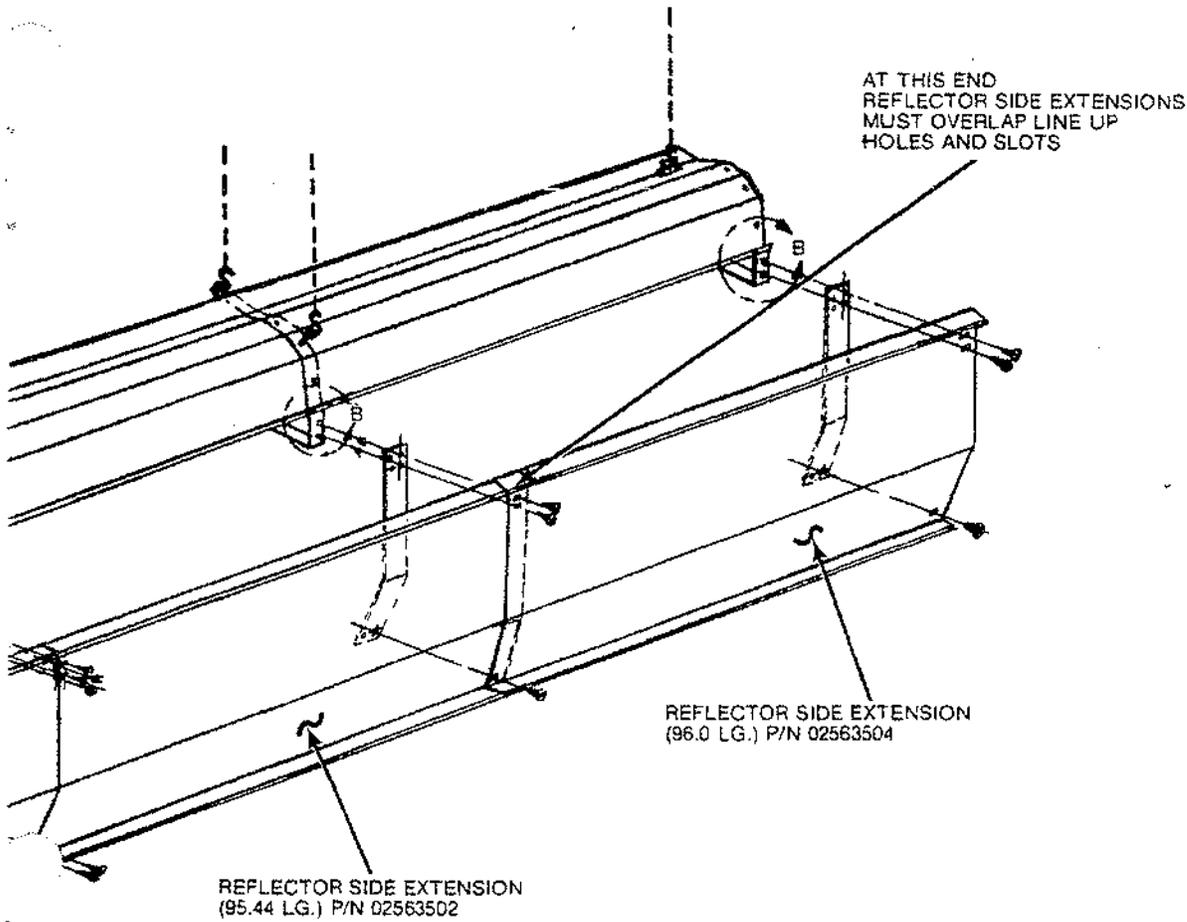



REFLECTOR SIDE EXTENSIONS (48.0 LG.) P/N 02563503

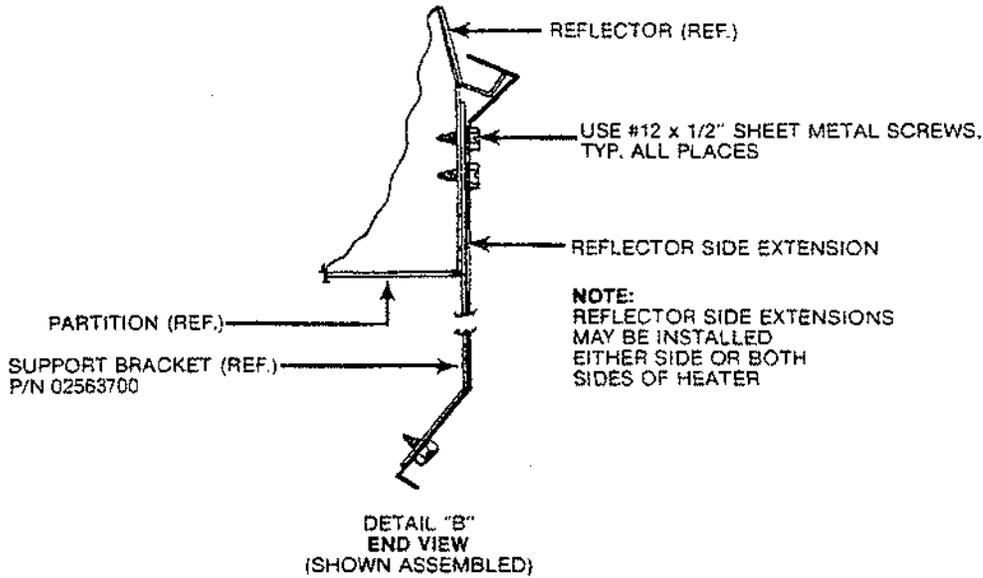

PACKAGES:
 P/N 02517801 REFLECTOR SIDE EXTENSION PACKAGE RTH-R8 & RTH-R10



P/N 02517802 REFLECTOR SIDE EXTENSION PACKAGE FOR 8-FT. EXTENSION (See NOTE 2)

IMPORTANT: In all cases clearance to combustibles must be maintained. See Clearance to Combustibles Charts (Figure 3) of these instructions.

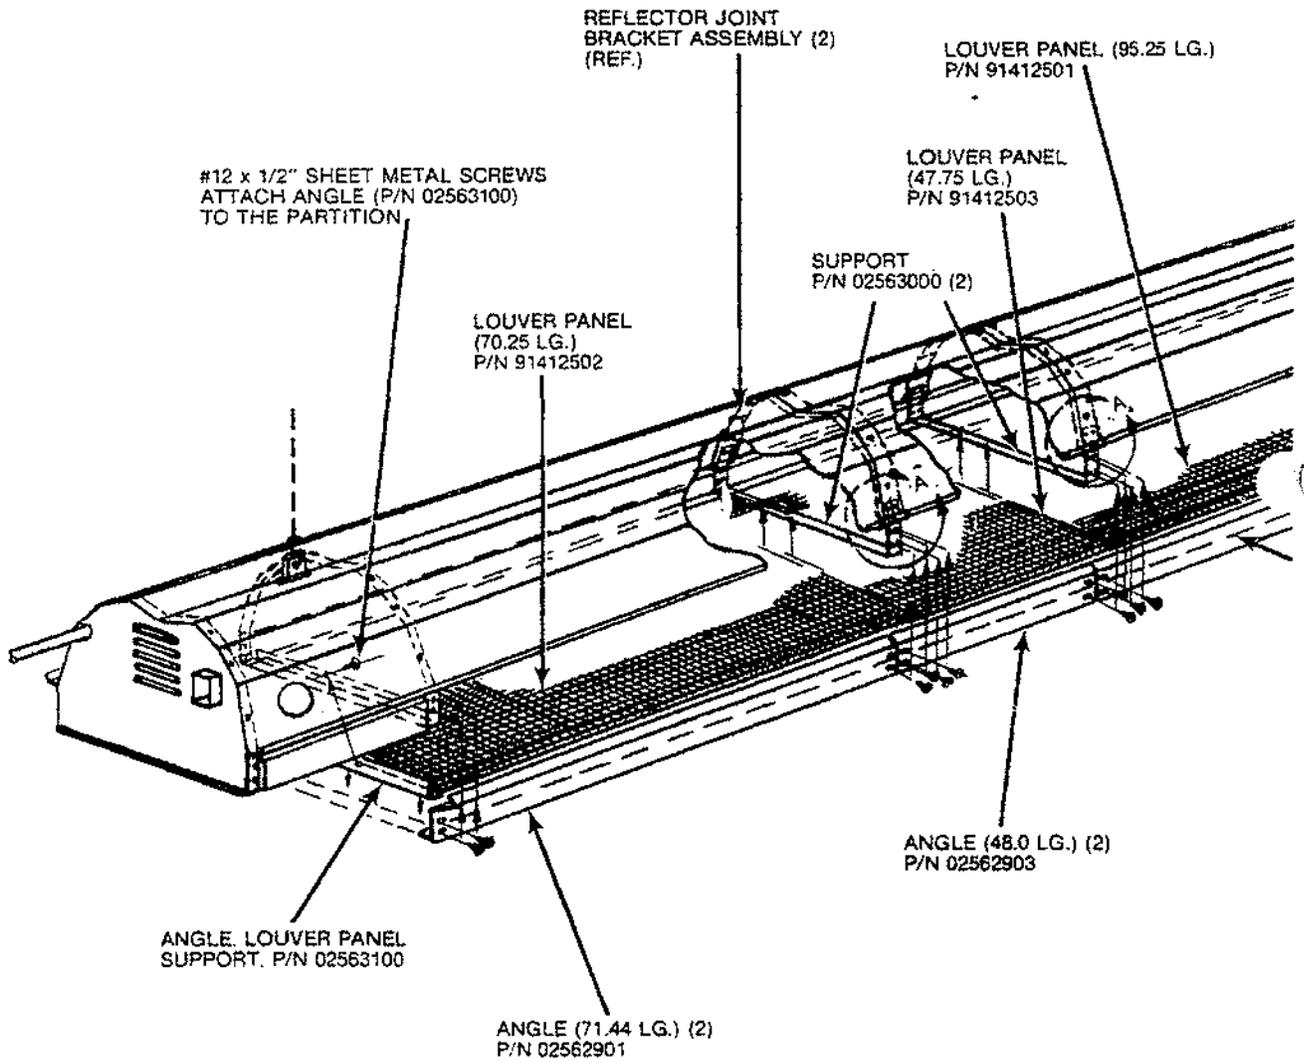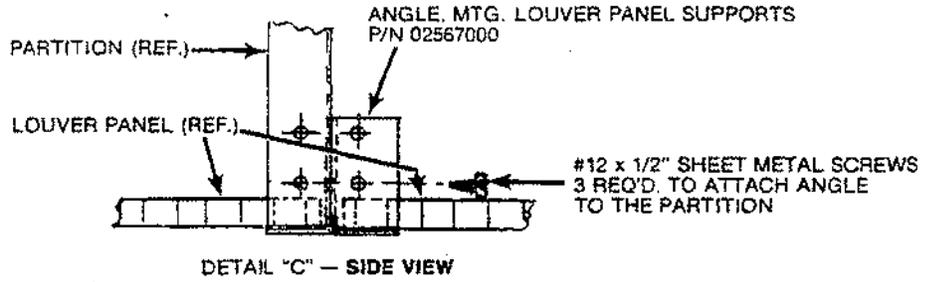

IMPORTANT: In all cases clearance to combustibles must be maintained. See clearance to combustibles charts (Figure 3) of these instructions.

NOTE 2
THIS SECTION OF REFLECTOR SIDE EXTENSION OR LOUVER PANEL USED WITH 8-FT. DOWNSTREAM TUBING SECTION FOR RTH-R10 OR 8-FT. TUBING EXTENSION WITH RTH-R8 OR RTH-R10.

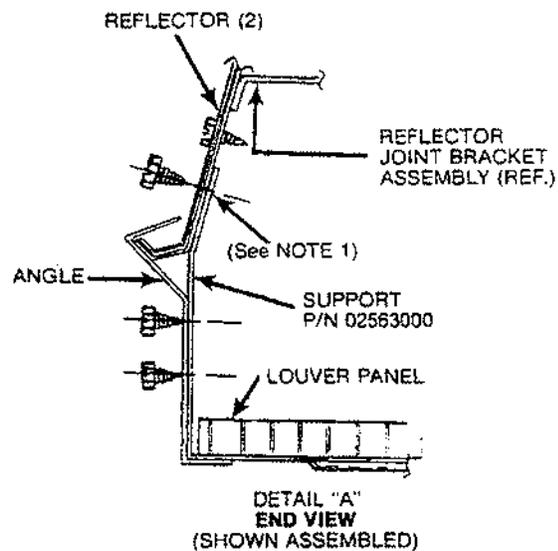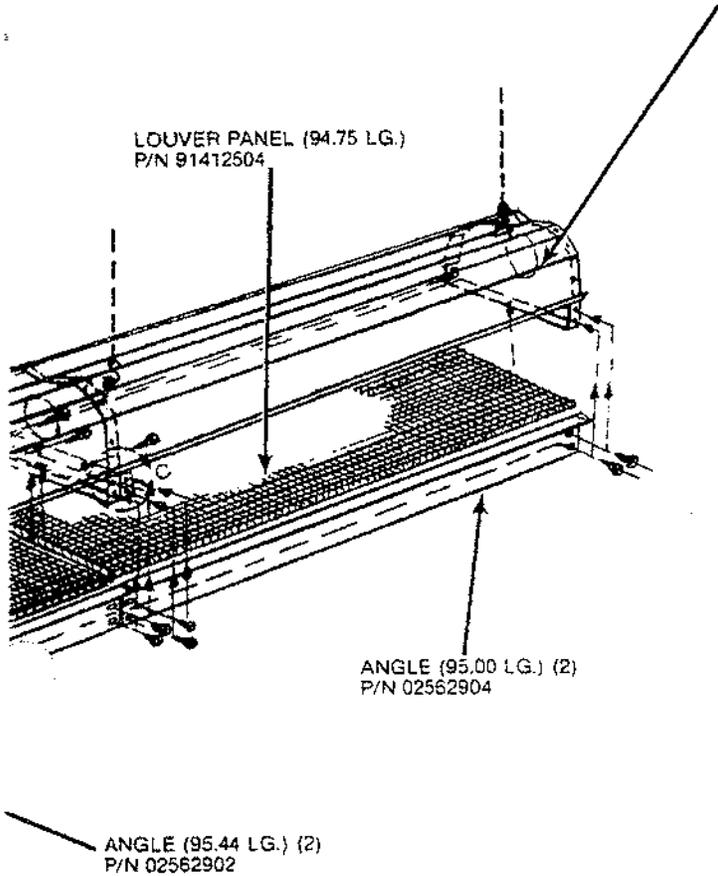



NOTE 1
BY USING FOUR HOLES PROVIDED IN THE REFLECTOR JOINT BRACKET ASSEMBLY (VISIBLE FROM INSIDE), DRILL 7/32" DIAM. HOLES THROUGH ASSEMBLED REFLECTORS, THEN INSTALL SUPPORT P/N 02563000 BY USING #12 x 1/2" SHEET METAL SCREWS AS SHOWN IN DETAIL "A".

PACKAGES:
P/N 02517701 DECORATIVE GRILLE (LOUVER PANEL)
PACKAGE RTH-R8 & RTH-R10

P/N 02517702 DECORATIVE GRILLE (LOUVER PANEL)
PACKAGE FOR 8-FT. EXTENSION
(See NOTE 2) RTH-R8 & RTH-R10


**INSTALLATION OF OPTIONAL DECORATIVE GRILLE
MODEL RTH-R8 AND MODEL RTH-R10**

Figure 15

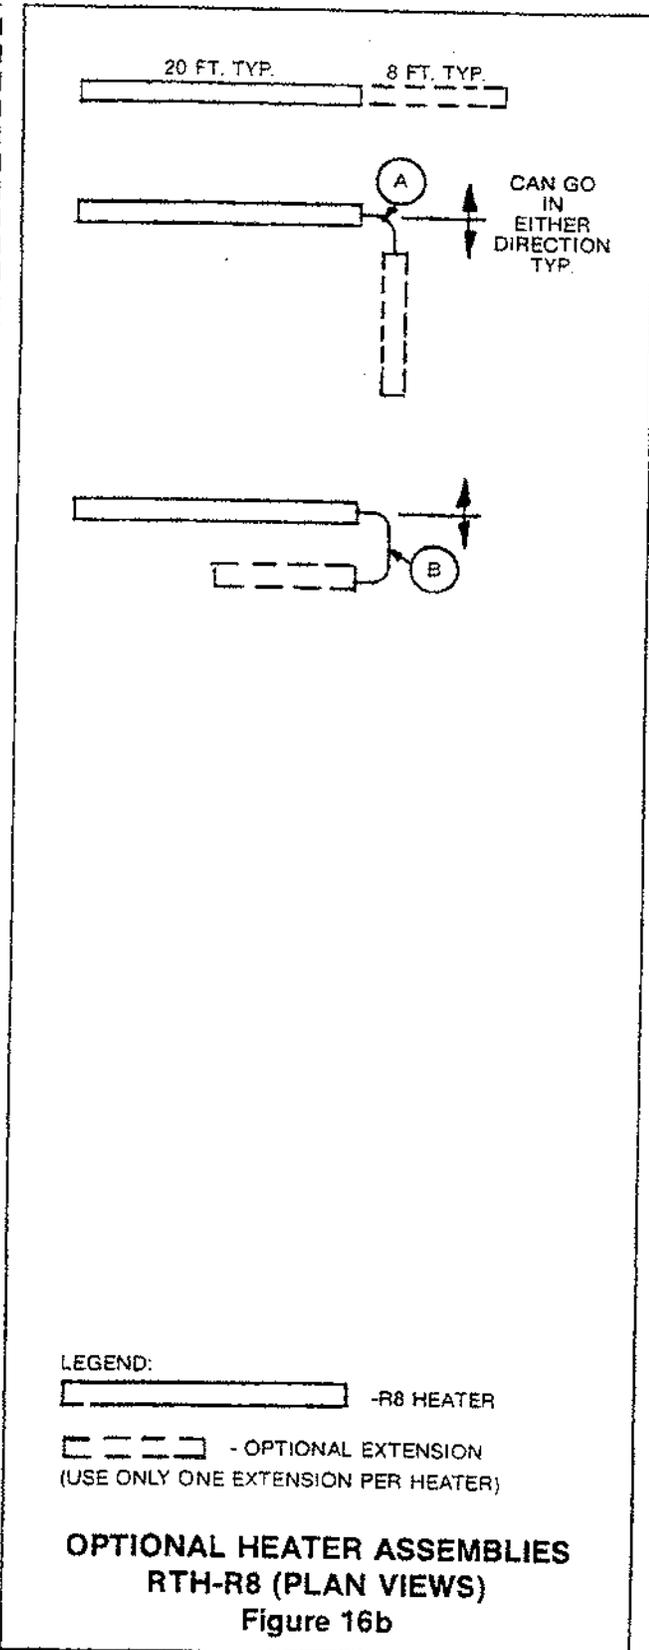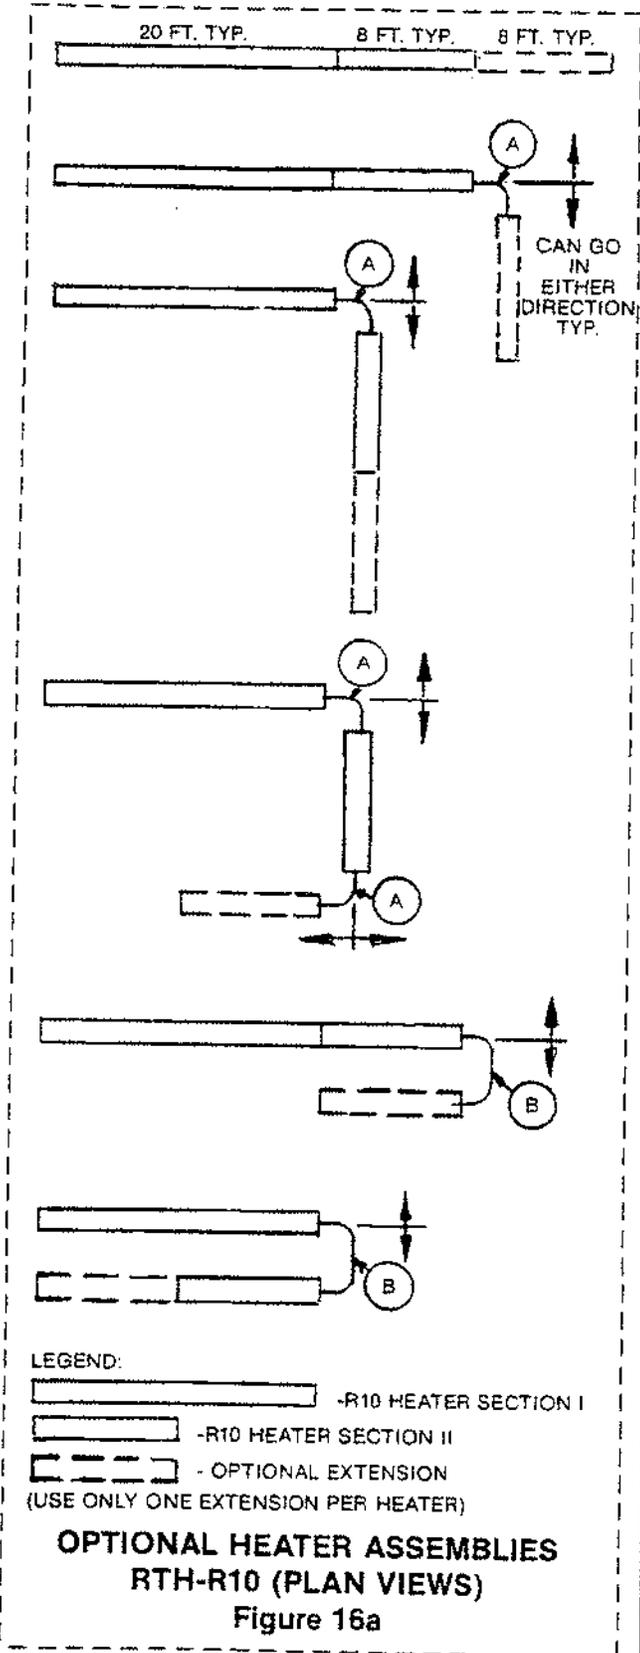


- A Optional Elbow Assembly, P/N 02532601
- B Optional "U" Bend Assembly, P/N 02532701

NOTE: For Assembly Details see Page 19 of these instructions.

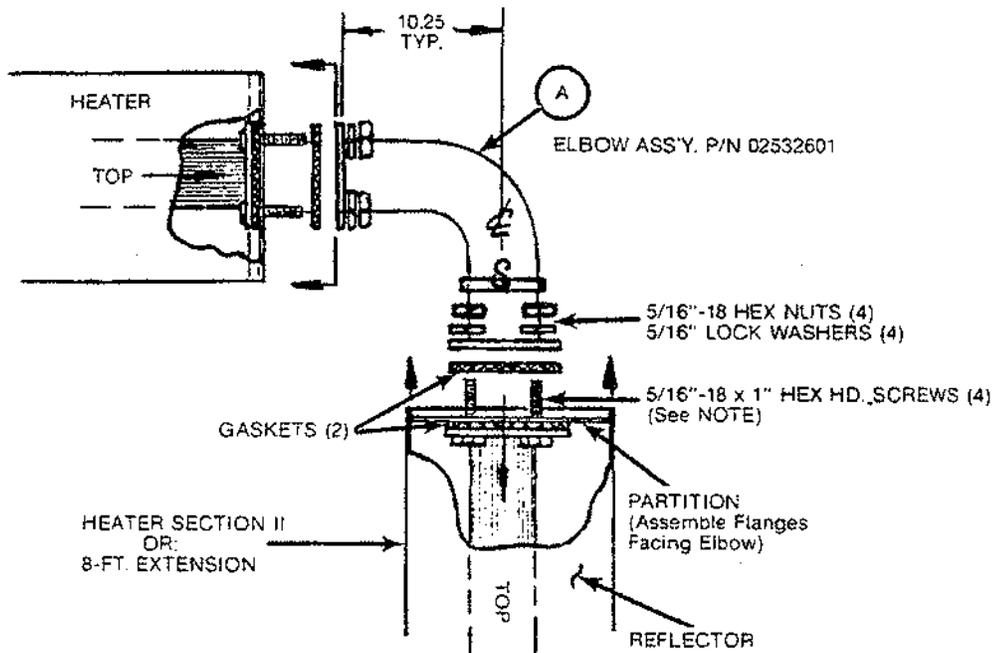

NOTE:
 INDICATED 5/16"-18 x 1" HEX HD. SCREWS, HEX NUTS, LOCK WASHERS, GASKETS AND PARTITION SUPPLIED WITH ELBOW ASSEMBLY OR: "U" BEND ASSEMBLY.

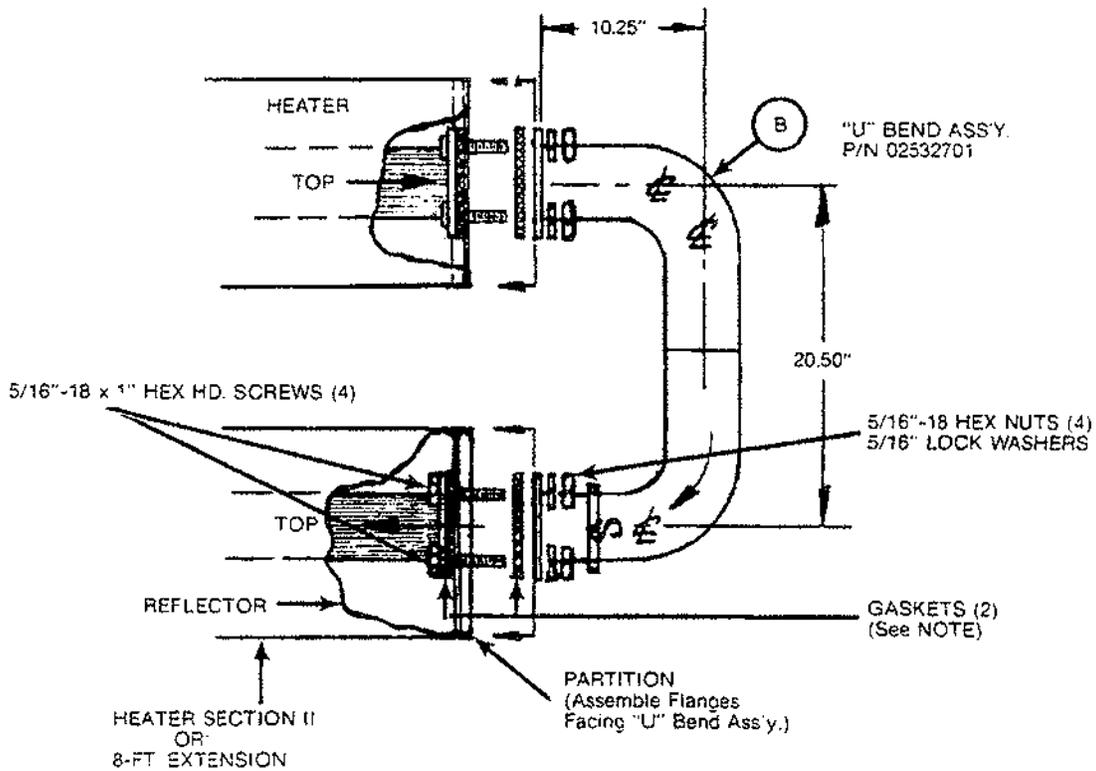

**ASSEMBLY DETAILS
 (OPTIONAL HEATER ASSEMBLY)
 MODEL RTH-R8 AND MODEL RTH-R10**

Figure 17

SERVICE INSTRUCTIONS

SEQUENCE OF OPERATION

The RTH Gordon-Ray Heater is equipped with a gas direct spark ignition system. This is how it works:

1. Thermostat on a call for heat energizes the blower motor and motor end switch.
2. When motor approaches nominal running RPM, the air proving pressure switch closes, energizing the control board which energizes the spark ignitor and opens the redundant gas valve.
3. With normal operation as the flame is established, the spark ceases.
4. If the flame is not established during the flame establishing period, the system closes the gas valve and locks out.
5. If flame is extinguished during the duty cycle, the ignitor will provide two retries for ignition before going into lockout.
6. After lockout, control must be reset by turning down thermostat for five seconds and then raising it again to desired temperature.
7. When thermostat is satisfied, all power to the unit is de-energized.

SERVICE PROCEDURES

CAUTION: Before removing control housing cover for any type of service to heater, be sure that gas and electric supply to heater are turned OFF.

NO POWER TO HEATER:

1. Check to see that thermostat is calling for heat.
2. Check for blown fuse in electrical supply to heater.
3. Check for power on hot and ground leads entering heater junction box.
4. Check for loose or broken wire at heater junction box.

BLOWER MOTOR FAILS TO RUN:

1. Check for loose or broken wires from motor to hot and ground leads entering heater junction box.
2. Check to see if blower impeller turns freely; it may be hitting blower housing or motor shaft may be seized. Adjust to free impeller or repair or replace blower motor.

NO SPARK:

With gas to heater turned OFF, set the thermostat above room temperature. When blower motor attains running speed the air proving pressure switch energizes the spark module. The spark electrode may be observed by looking through the observation window of the burner control housing. Spark should appear as a bright blue arc across the electrodes. Spark duration is only a few seconds since main flame is not established, so recycling of the thermostat may be necessary for observation purposes. If no spark appears:

1. Check for loose or broken leads from air proving pressure switches.
2. Check for carbon bridge or broken porcelain insulator on spark electrode.
3. Check spark electrode gap; should be .125 inches.
4. Check leads from electrode for loose connections or frayed insulation.
5. Replace direct spark ignition module if defective; module is not field repairable.

NO GAS PRESENT

Set thermostat above room temperature. When blower attains running speed air proving pressure switch energizes main gas valve. If no gas flow or flame is established:

1. Check to see that manual gas supply valve to heater is ON.
2. Check to see that dial knob on redundant valve in control housing is turned to ON.
3. Check for gas pressure at 1/8" NPT Gauge tapping upstream of burner control.
4. Check for loose or broken wire leads from air proving pressure switches.
5. Check for loose or broken wire leads from gas valve to circuit board.
6. Replace defective gas valve.
7. Replace circuit board. Board is not field repairable.


FENWAL CONTROL

Flame current is the current which passes through the flame from the sensor to ground to complete the primary safety circuit. The minimum flame current necessary to keep the ignitor from lockout is five microamps. To measure flame current, DISCONNECT INPUT VOLTAGE then remove low voltage sensing lead wire from electrode terminal and insert a 0-50 DC microamp meter in a series with the sensor probe and sensor wire. Meter reading should be 5 microamps or higher.

If meter reads below "0" on scale, the leads are reversed. Disconnect power and reconnect leads for proper polarity.

If the flame current reading is less than 5 microamps, reposition the electrode in the flame to get a higher reading.

Diagram No. 56

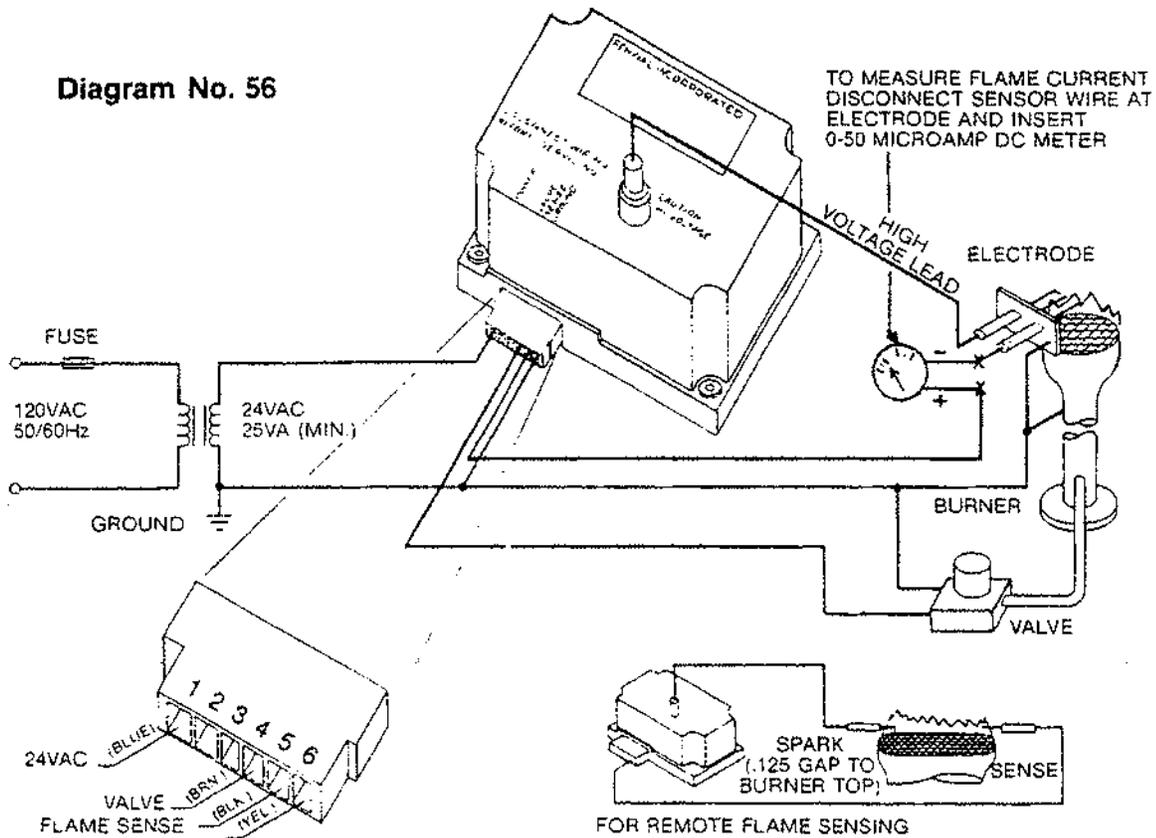


FENWAL CONTROL
Figure 18

MAINTENANCE

For best performance, maintenance procedures should be performed before each heating season.

1. Be sure gas and electric supply to heater are turned OFF before performing any service or maintenance on heater.
2. Open control housing cover.
3. Check condition of blower scroll and motor. Dirt and dust may be blown out with compressed air or a vacuum cleaner may be used.
4. Remove burner and check its condition. Clean or replace as necessary.
5. Make visual check of electrode. Replace if there is excessive carbon residue, erosion of electrodes, or other defects. Gap should be .125 inches.
6. Check to see that burner observation window is clean and free of cracks or holes. Clean or replace as necessary.
7. Remove rear baffle from firing tube. Brush it clean if any scale or soot deposits are found on baffle.
8. With baffle removed, check inside of firing tube with flashlight. If carbon or scale are present, scrape out deposits with wire brush on rod or metal plate attached to wooden pole.
9. Check firing tube inside and out for holes or cracks. Replace firing tube if any cracks are found.
10. Replace rear flue baffle and baffle retaining screw.
11. Check flue pipe for soot or dirt or any obstruction to the outdoors. After cleaning as necessary, reattach flue pipe.
12. Outside surfaces of heater may be cleaned with damp cloth.
13. Check for leaks with soap solution on any pipe joints that were disconnected during maintenance procedure before putting heater back in service.
14. Check performance of heater and visually observe flame for proper flame characteristics.
15. A qualified service agency should be contacted for service other than routine maintenance.

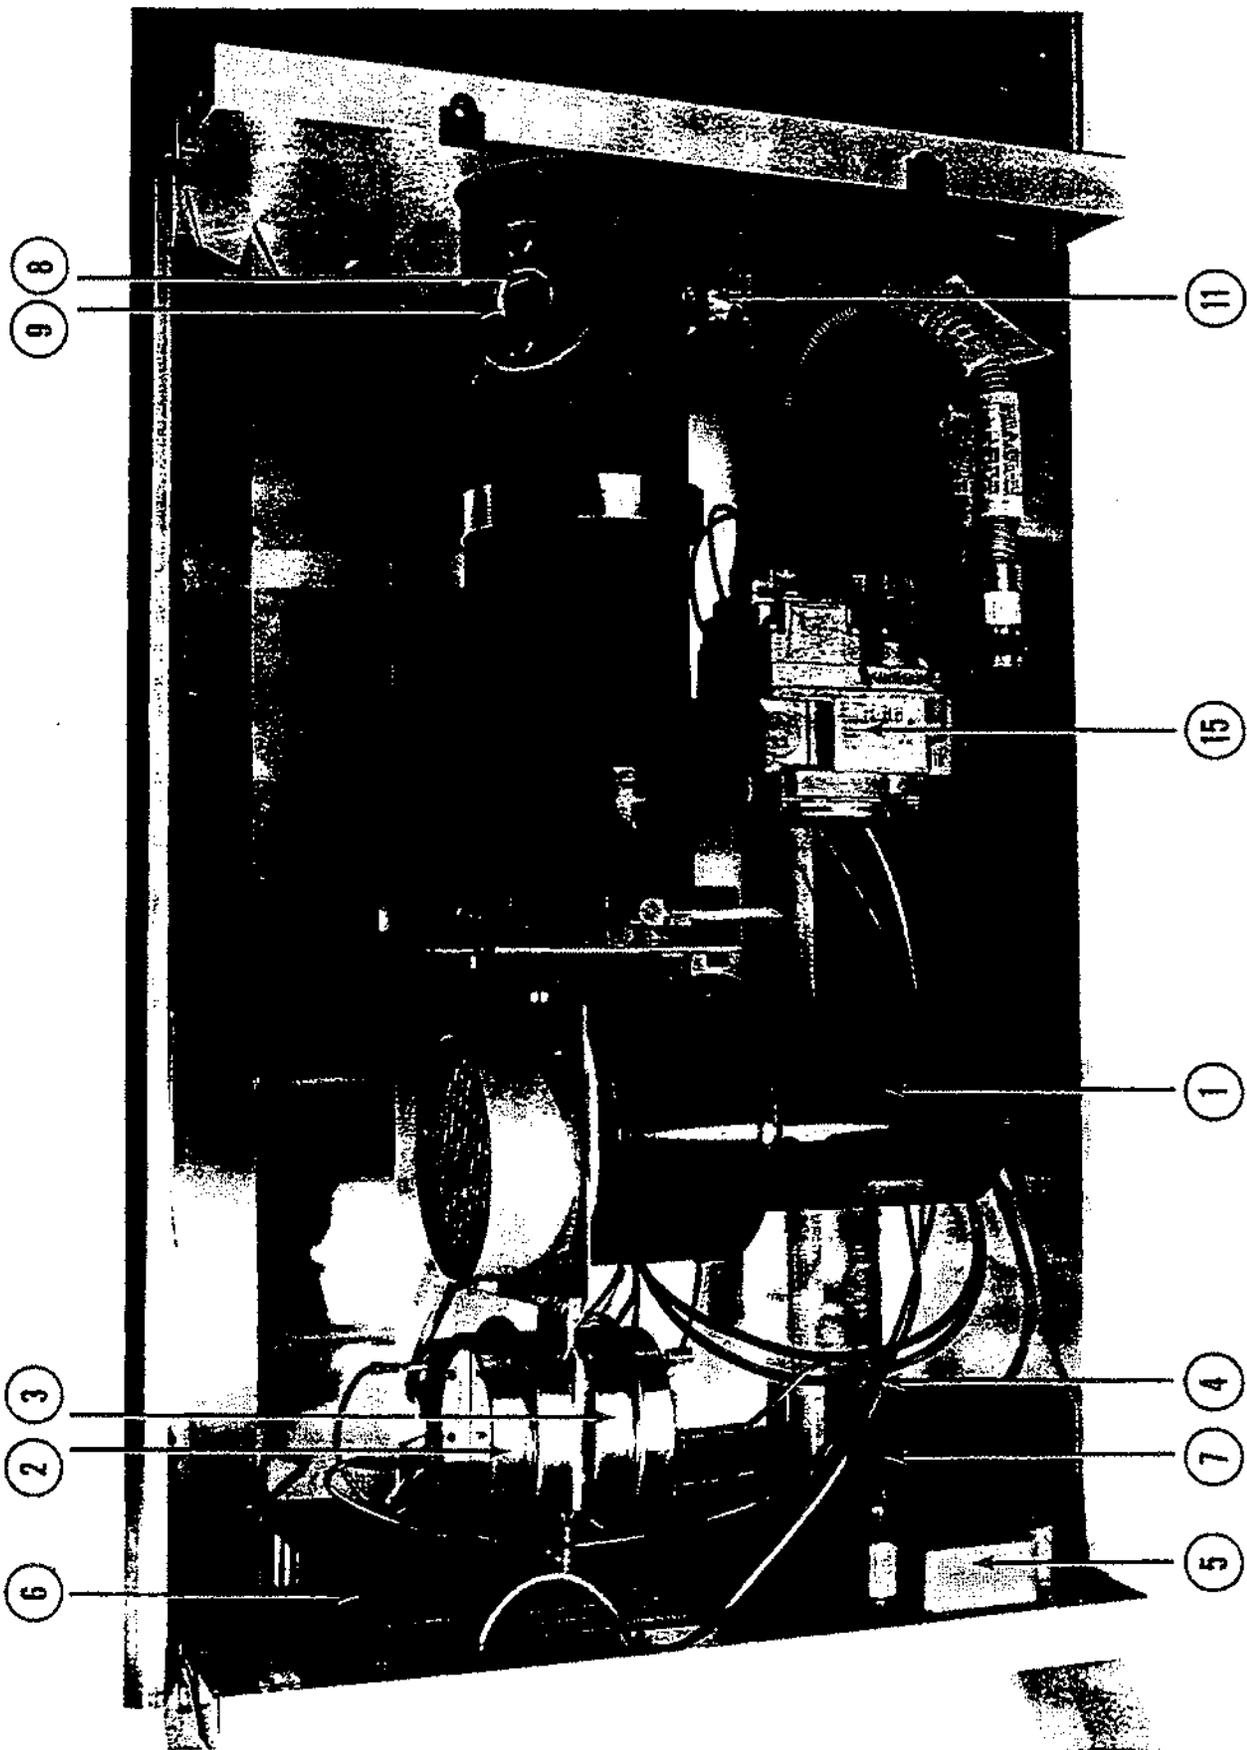


REPLACEMENT PARTS

MODEL NO.

ITEM	DESCRIPTION	MODEL NO.	
		RTH-R8 PART NO.	RTH-R10 PART NO.
1	Motor/Blower Assembly	02517400	02517400
2	Normally Closed Pressure Switch	90433601	90433601
3	Normally Open Pressure Switch	90433701	90433701
4	Wiring Harness	02533301	02533301
5	Ignition Control Module Fenwal	90434000	90434000
6	Transformer	02535700	02535700
7	Ignition Cable Fenwal	90433800	90433800
8	Mica Window	02553200	02553200
9	Mica Window Gasket	01351200	01351200
10	Burner Orifice Adaptor	02591800	02591800
11	Electrode Fenwal	90427402	90427402
12	Orifice Natural	91910418	91910410
13	Orifice L.P.	91910440	91910434
14	Burner Assembly	02531400	02531400
15	Valve Robertshaw Natural Gas	90031200	90031200
15	Valve Robertshaw L.P. Gas	90031100	90031100
16	Fuel Conversion Kit Natural to L.P.	02516301	02516301
17	Fuel Conversion Kit L.P. to Natural	02516302	02516302

ACCESSORIES

DESCRIPTION	MODEL NO.	
	RTH-R8 PART NO.	RTH-R10 PART NO.
Decorative Grille Package for 20' of Heater	02517701	02517701
Decorative Grille Package for 8' Extension	02517702	02517702
Side Extension Package for 20' of Heater	02517801	02517801
Side Extension Package for 8' Extension	02517802	02517802
Outside Air Adaptor Package	02527901	02527901
Radiant Tube Extension Package	02531301	02531301
Thru-the-Wall Vent Terminal	90502100	90502100
Elbow Package	02532601	02532601
Return Bend Package	02532701	02532701



NO POSTAGE
NECESSARY
IF MAILED
IN THE
UNITED STATES

BUSINESS REPLY MAIL

FIRST CLASS PERMIT NO. 7406 BUFFALO, NY

POSTAGE WILL BE PAID BY ADDRESSEE

Roberts-Gordon, Inc.
Subsidiary of A.J. Industries, Inc.
P.O. Box 44
Buffalo, N.Y. 14240



WARRANTY CARD

Gordon-Ray Installation Information

Name _____

Address Where Installed _____

Phone No. _____ Person To Contact _____

Installation Date _____ Installer _____

Purchased From _____

DID THESE UNITS REPLACE AN EXISTING HEATING SYSTEM? YES NO

Type _____ BTU's Replaced _____

Gordon-Ray Units No. _____ Type _____

Serial No's. _____

Type of Application — Please Indicate

- | | | |
|---|---|---|
| <input type="checkbox"/> AIRPORT FACILITY
<input type="checkbox"/> Hangar <input type="checkbox"/> Warehouse
<input type="checkbox"/> Other _____ | <input type="checkbox"/> FARM IMPLEMENT DEALER | <input type="checkbox"/> SCHOOL
TYPE _____ |
| <input type="checkbox"/> AUTO BODY SHOP | <input type="checkbox"/> FIRE STATION | <input type="checkbox"/> STORE
TYPE _____ |
| <input type="checkbox"/> AUTO DEALER | <input type="checkbox"/> GARAGE
TYPE _____ | <input type="checkbox"/> SWIMMING POOL |
| <input type="checkbox"/> AUTO SERVICE SHOP | <input type="checkbox"/> GREENHOUSE | <input type="checkbox"/> TENNIS COURT |
| <input type="checkbox"/> ASSEMBLY PLANT | <input type="checkbox"/> HOCKEY RINKS | <input type="checkbox"/> TRUCKING COMPANY |
| <input type="checkbox"/> BOTTLING PLANT OR
WAREHOUSE | <input type="checkbox"/> HIGHWAY DEPT. BUILDING
TYPE _____ | <input type="checkbox"/> UTILITY COMPANY BUILDING
TYPE _____ |
| <input type="checkbox"/> CAR WASH | <input type="checkbox"/> LUMBER COMPANY | <input type="checkbox"/> WAREHOUSE |
| <input type="checkbox"/> CONSTRUCTION EQUIP. DEALER | <input type="checkbox"/> MANUFACTURING PLANT
TYPE _____ | <input type="checkbox"/> WELD SHOP
TYPE _____ |
| <input type="checkbox"/> FABRICATION PLANT
TYPE _____ | <input type="checkbox"/> MACHINE SHOP | <input type="checkbox"/> ZOO |
| <input type="checkbox"/> FARM
<input type="checkbox"/> Cattle <input type="checkbox"/> Dairy <input type="checkbox"/> Horse
<input type="checkbox"/> Pig <input type="checkbox"/> Poultry | <input type="checkbox"/> PUBLIC BUILDING
TYPE _____ | <input type="checkbox"/> OTHER _____ |
| <input type="checkbox"/> FARM BUILDING
TYPE _____ | <input type="checkbox"/> POST OFFICE | |
| | <input type="checkbox"/> RESTAURANT
TYPE _____ | |